

Roman Shade Installation Instructions

Standard Cord and Top-Down / Bottom-Up Installation

p -2-

Continuous Cord Loop Installation

p -7-

Cordless Installation

p -12-

Motorized Installation

p -16-

Optional Valance Installation

p -22-

Thank you for purchasing this fine window treatment proudly constructed by us. Your shade has been custom-sized to your personal specifications with the highest standards of quality and craftsmanship. We have confidence that it will provide you with many years of beauty and easy maintenance. Enjoy!

Follow the easy step-by-step instructions to install your shade. Should you need additional support, please feel free to call our Customer Service Center at 1-800-221-6352 or email us at windowfashions@springswindowfashions.com. We will be glad to help you.

Again, we appreciate that you have chosen us to enhance the design and look of your home.

Gracias por adquirir este fino tratamiento de ventana orgullosamente fabricado para usted. Su persiana ha sido hecha a la medida del cliente según sus especificaciones personales con los más altos estándares de calidad y trabajo artesanal. Nosotros tenemos la confianza que le proveerá muchos años de belleza y fácil mantenimiento. ¡Disfrútela!

Siga las fáciles instrucciones "paso a paso" para instalar su persiana. Si necesita ayuda adicional, favor de proceder con toda libertad llamando al Centro de Servicio al Cliente al teléfono 1-800-221-6352 o enviando un correo electrónico a windowfashions@springswindowfashions.com. Estaremos muy dispuestos para ayudarle.

Nuevamente, nosotros apreciamos que nos haya escogido para mejorar el diseño y la apariencia de su hogar.

Merci d'avoir acheté ce superbe traitement de fenêtre que nous sommes fiers d'avoir exécuté pour vous. Votre store a été fait sur mesure selon votre propre cahier des charges dans un souci d'excellence et de la plus haute technicité. Nous ne doutons pas qu'il vous offrira des années de beauté et d'entretien facile Profitez-en bien !

Pour installer votre store, veuillez suivre les instructions détaillées. Si vous avez des questions n'hésitez pas à prendre contact avec notre Centre de service après-vente en téléphonant au 1-800-221-6352 ou par courrier électronique au windowfashions@springswindowfashions.com. Nous vous aiderons avec plaisir.

Encore une fois, nous vous remercions de nous avoir choisi pour améliorer et embellir votre intérieur.



HOW TO INSTALL CÓMO INSTALAR COMMENT INSTALLER

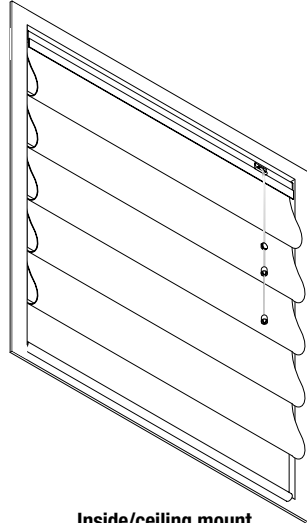
HOW TO INSTALL Inside-/ceiling- or outside-mount standard Roman shade

CÓMO INSTALAR la persiana de tela Romana estándar de montaje interior/de cielo o exterior


COMMENT INSTALLER un store romain en pose intérieure/au plafond ou extérieure

➔


Finished looks
Apariencia final
Aspects finis



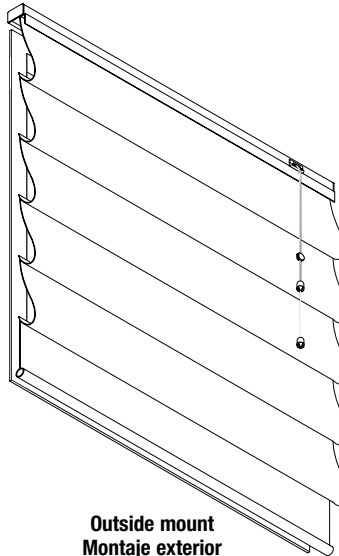
Inside/ceiling mount
Montaje de techo/interior
Pose intérieure/au plafond



Outside mount
Montaje exterior
Pose extérieure



Looped
Lazada
En boucle

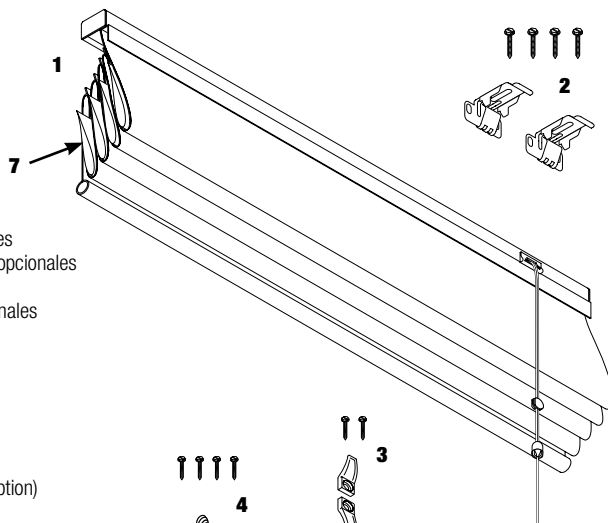


Flat
Plano
Plat

1

Everything needed to install your shade
 Todo lo necesario para instalar su persiana
 Tout le nécessaire pour installer votre store

- 1 Shade
- 2 Brackets/screws
- 3 Optional cord cleats
- 4 Optional hold-down brackets
- 5 Optional extension brackets
- 6 Optional side-mount brackets
- 7 Shipping tube




- 1 Persiana
- 2 Soportes/tornillos
- 3 Sostenedores de cuerda opcionales
- 4 Soportes sostenedores inferiores opcionales
- 5 Soportes de extensión opcionales
- 6 Soportes de montaje lateral opcionales
- 7 Tubo de empaque

- 1 Store
- 2 Supports/vis
- 3 Taquets du cordon (en option)
- 4 Supports de retenue (en option)
- 5 Rallonges (en option)
- 6 Supports pour pose latérale (en option)
- 7 Tube de transport

Bracket chart Tabla de soportes Tableau des supports

Ordered width Ancho ordenado Largeur commandée	Bracket quantity Cantidad de soportes Quantité de boîtier
Up to 42" • hasta 106,7 cm • jusqu'à 106,7 cm	2
42 1/2" to 72" • 106,8 cm hasta 182,9 cm • 106,8 cm jusqu'à 182,9 cm	3
72 1/2" to 102" • 183 cm hasta 259,1 cm • 183 cm jusqu'à 259,1 cm	4
102 1/2" to 132" • 259,2 cm hasta 335,3 cm • 259,2 cm jusqu'à 335,3 cm	5
132 1/2" to 144" • 335,4 cm hasta 365,9 cm • 335,4 cm jusqu'à 365,9 cm	6

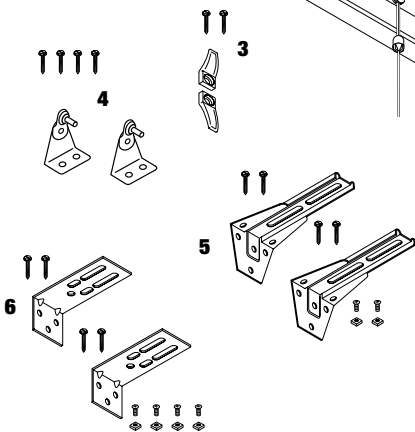


Remove the plastic shipping tubes (item 7 above) from the shade by sliding them out the end of the shade. Be careful not to slide the cord clips out of vertical alignment. If the clips are slid out of position a little and not all the way off, it will still distort the appearance of the shade. Do not dispose of the packaging until the shade is installed and operating to your satisfaction.

Remueva los tubos plásticos de empaque (número 7 arriba) de la persiana deslizándolos por afuera del extremo de la persiana. Tenga cuidado de no deslizar los sujetadores de cuerda fuera del alineamiento vertical. Si los sujetadores se deslizaron fuera de la posición un poco, pero no completamente, se va a distorsionar la apariencia de la persiana. No bote los materiales de empaque hasta que la persiana esté instalada y operando a su satisfacción.

Retirer les tubes de transport en plastique (pièce 7 ci-dessus) du store en les faisant glisser à l'extrémité du store. Bien veiller à ne pas faire glisser les agrafes du cordon de leur alignement vertical. Même si les agrafes ont légèrement glissé hors de position mais pas complètement, l'aspect du store en sera altéré. Ne pas éliminer l'emballage avant d'avoir installé le store et d'avoir vérifié qu'il fonctionne convenablement.

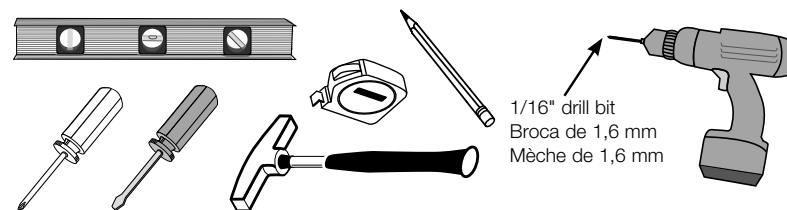Tools needed • Herramientas necesarias • Outillage nécessaire




1/16" drill bit
 Broca de 1,6 mm
 Mèche de 1,6 mm

2

Determine inside/ceiling, outside or side mount
 Determine el montaje de techo/interior, exterior o montaje lateral
 Choisir la pose intérieure/au plafond, extérieure ou latérale

2

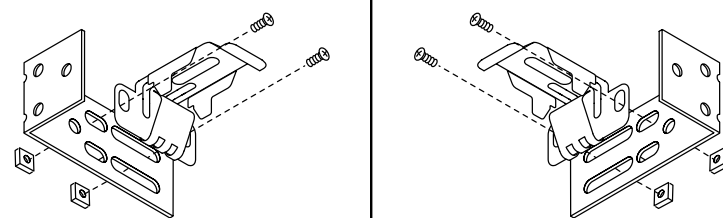Optional side mount: assemble brackets
 Montaje lateral opcional: ensamble los soportes
 Pose latérale en option: assembler les supports




3

Place shade in desired location, mark corners
 Coloque la persiana en la ubicación deseada, marque las esquinas
 Placer le store dans l'emplacement souhaité, marquer les coins

Inside/ceiling mount
 Montaje de techo/interior
 Pose intérieure/au plafond

Outside mount
 Montaje exterior
 Pose extérieure

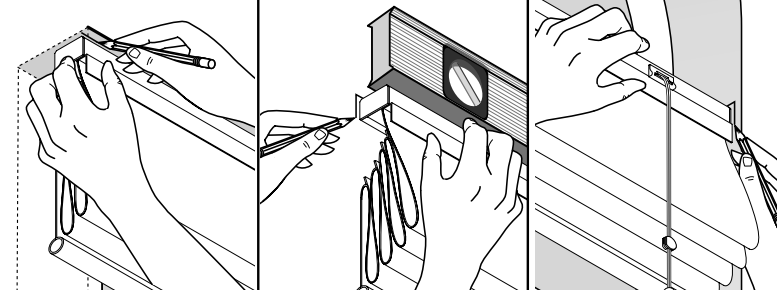
Optional side mount
 Montaje lateral opcional
 Pose latérale (en option)




4

Measure in from shade edge on both ends and mark
 Mida desde el borde de la persiana en ambos extremos y marque
 Mesurer depuis le bord du store à chaque extrémité, et marquer

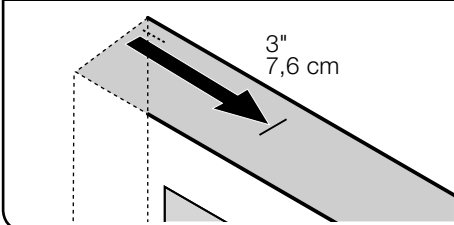Inside/ceiling mount
 Montaje de techo/interior • Pose intérieure/au plafond



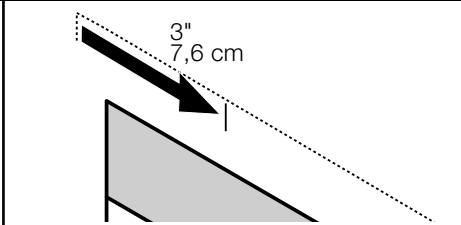
Outside mount
 Montaje exterior • Pose extérieure



5


Mark screw locations; space additional brackets evenly
 Marque las ubicaciones de los tornillos; espacie los soportes adicionales a distancias iguales
 Marquer l'emplacement des vis ; placer les supports additionnels à intervalle régulier

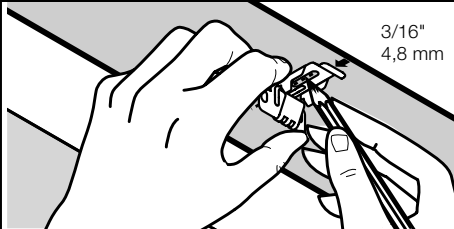Inside/ceiling mount
 Montaje de techo/interior • Pose intérieure/au plafond




3/16" to front of bracket for flush mount headrail
 4,8 mm al frente del soporte para montaje del cabezal a ras.
 4,8 mm jusqu'à la partie avant du support pour un montage encastré du boîtier

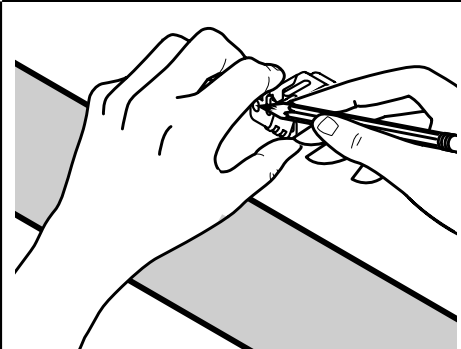Outside mount
 Montaje exterior • Pose extérieure




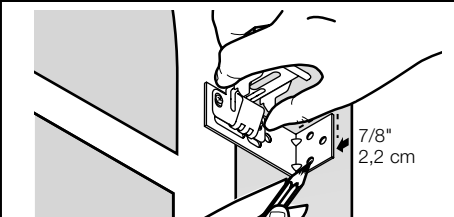Optional side mount
 Montaje lateral opcional • Pose latérale (en option)



7/8" to front of bracket for flush mount headrail
 2,2 cm al frente del soporte para montaje del cabezal a ras.
 2,2 cm jusqu'à la partie avant du support pour un montage encastré du boîtier

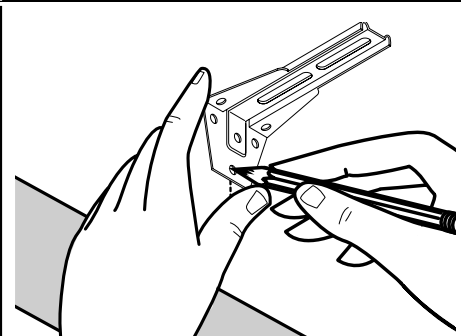
Optional extension bracket
 Soporte de extensión opcional • Rallonge (en option)




6

Drill holes
 Taladre los agujeros
 Percer les trous

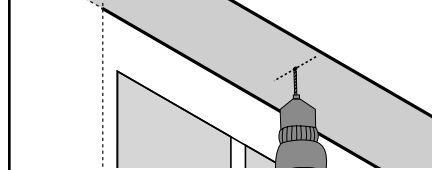
Inside/ceiling mount
 Montaje de techo/interior • Pose intérieure/au plafond



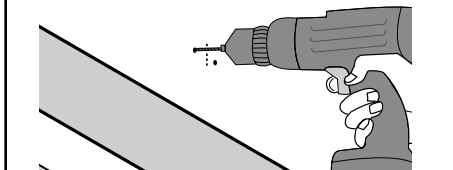
Outside mount
 Montaje exterior • Pose extérieure



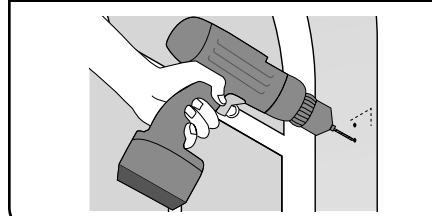Optional side mount
 Montaje lateral opcional • Pose latérale (en option)



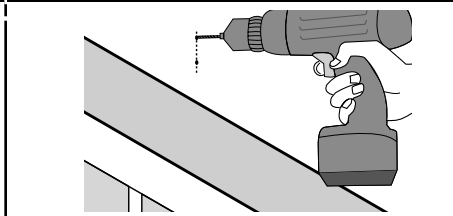
Optional extension bracket
 Soporte de extensión opcional • Rallonge (en option)




7

Screw brackets into place
 Atornille los soportes en su lugar
 Visser les supports

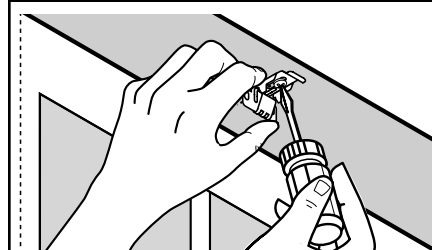
Inside/ceiling mount
 Montaje de techo/interior • Pose intérieure/au plafond



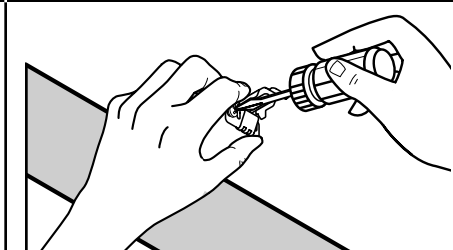
Outside mount
 Montaje exterior • Pose extérieure



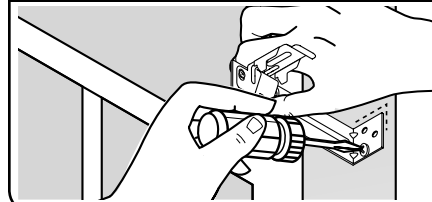Optional side mount
 Montaje lateral opcional • Pose latérale (en option)




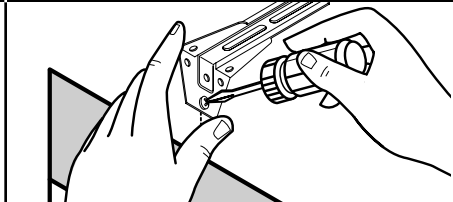Optional extension bracket
 Soporte de extensión opcional • Rallonge (en option)



7

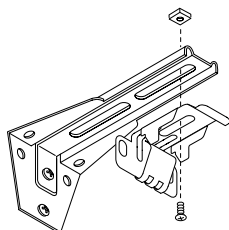Optional extension brackets: assemble brackets
Soportes de extensión opcionales: ensamble los soportes
Rallonges en option : assembler les supports




Attach headrail brackets to extension brackets using machine screws and nuts.
 Conecte los soportes del cabezal a los soportes de extensión usando tornillos y tuercas.
 Fixer les supports de boîtier aux rallonges à l'aide des vis et boulons de mécanique


8

Mount shade into brackets
Monte la persiana en los soportes
Monter le store sur les supports

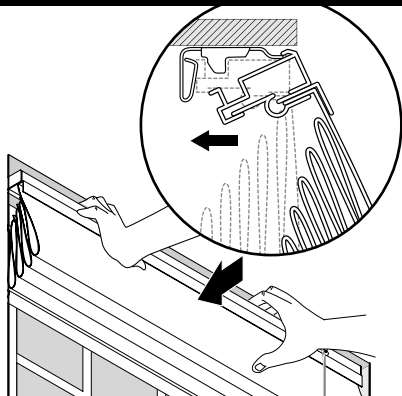
Inside/ceiling mount
Montaje de techo/interior • Pose intérieure/au plafond



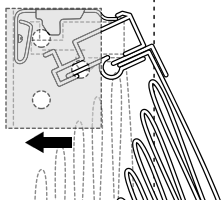
Optional Side Mount
Montaje Lateral Opcional • Pose latérale (en option)



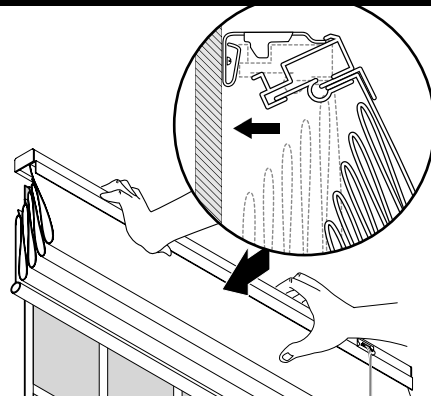Outside mount
Montaje exterior • Pose extérieure





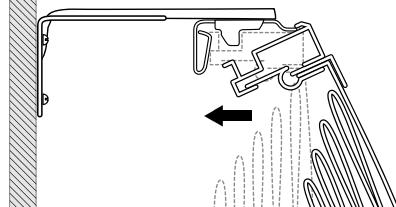Optional Extension Bracket
Soporte de Extensión Opcional • Rallonge (en option)





9

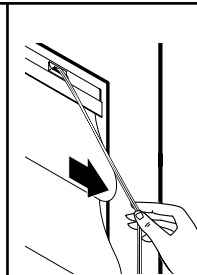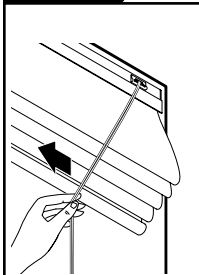Important shade operating information: cord cleats
Importante información para la operación de la persiana: sostenedores de cuerda
Information importante relative à l'emploi du store: taquets de cordon







Pull the cords toward the center to lower shade to desired position. Pull toward the outside edge to lock the shade.
 Jale las cuerdas hacia el centro para bajar la persiana a la más baja posición deseada. Jale hacia el borde exterior para trabar la persiana.
 Tirer les cordons vers le centre pour baisser le store dans la position désirée la plus basse. Tirer vers l'extérieur pour bloquer le store.

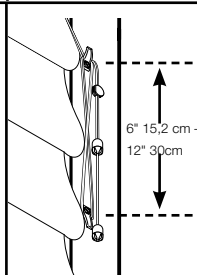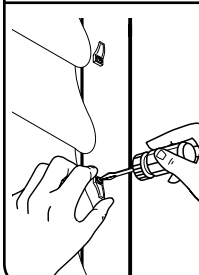

Optional: Install cord cleats and wrap cords in a figure eight to secure.
 Opcional: Instale los sostenedores de la cuerda; amarre las cuerdas en la forma de un ocho para asegurarla.
 En option: Installer les taquets du cordon; enrouler les cordons en 8 pour les arrimer.



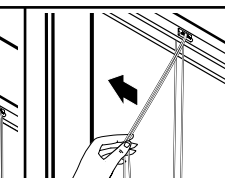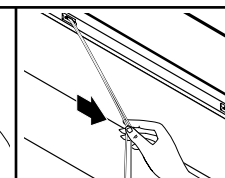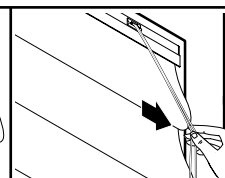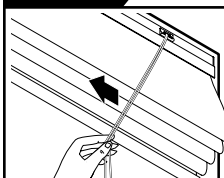Important operating information: bottom up/top down
Información de operación importante: abajo arriba/arriba abajo
Renseignements importants sur le fonctionnement: ouverture vers le haut/vers le bas



Pull right-hand cords toward the center to raise or lower the shade. Pull left-hand cords toward the center to raise or lower middle rail. Pull cords to outside edge to lock cords.

Jale las cuerdas de la mano derecha hacia el centro para subir o bajar la persiana. Jale las cuerdas de la mano izquierda hacia el centro para bajar o subir el riel medio. Jale las cuerdas hacia el extremo exterior para trabar las cuerdas.

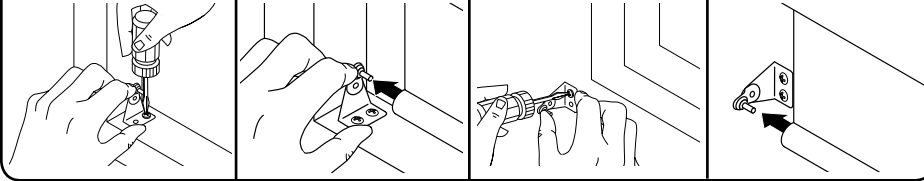
Tirer les cordons de droite vers le centre pour lever ou abaisser le store. Tirer les cordons de gauche vers le centre pour lever ou abaisser la tringle du milieu. Tirer les cordons vers le bord extérieur pour les bloquer




Optional hold-down brackets
Soportes de sostenedor-abajo opcional
Supports de retenue en option

Inside/ceiling mount
Montaje de techo/interior • Pose intérieure/au plafond

Outside mount
Montaje exterior • Pose extérieure



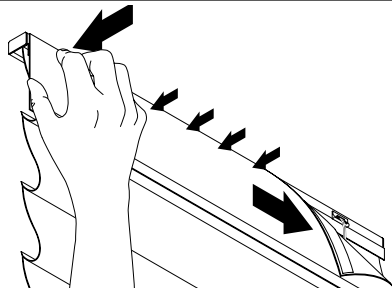Optional or standard valance
Opcional o cenefa estándar
Cantonnière standard ou en option




Attach the valance to the headrail by starting on one end and working to the opposite end, making sure it is level. Apply pressure all along the valance to ensure proper attachment to the headrail.

Conecte la cenefa al cabezal empezando en un extremo y trabajando hacia el extremo opuesto asegurándose que esté a nivel. Aplique presión a lo largo de toda la cenefa para asegurar una adecuada conexión al cabezal.

Attacher la cantonnière au boîtier en commençant à l'une des extrémités et en continuant vers l'extrémité opposée en veillant bien à ce qu'elle soit de niveau. Faire pression tout le long de la cantonnière pour garantir une bonne fixation au boîtier.



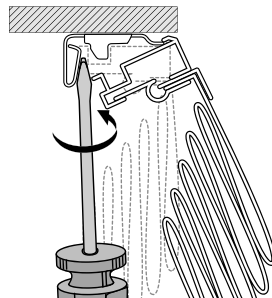Shade removal
Remoción de la persiana
Enlèvement du store



Thank you for purchasing this fine window treatment proudly constructed by us. Your shade has been custom-sized to your personal specifications with the highest standards of quality and craftsmanship. We have confidence that it will provide you with many years of beauty and easy maintenance. Enjoy!

Follow the easy step-by-step instructions to install your shade. Should you need additional support, please feel free to call our Customer Service Center at 1-800-221-6352 or email us at windowfashions@springswindowfashions.com. We will be glad to help you. Again, we appreciate that you have chosen us to enhance the design and look of your home.

Gracias por adquirir este fino tratamiento de ventana orgullosamente fabricado para usted. Su persiana ha sido hecha a la medida del cliente según sus especificaciones personales con los más altos estándares de calidad y trabajo artesanal. Nosotros tenemos la confianza que le proveerá muchos años de belleza y fácil mantenimiento. ¡Disfrútela!

Siga las fáciles instrucciones "paso a paso" para instalar su persiana. Si necesita ayuda adicional, favor de proceder con toda libertad llamando al Centro de Servicio al Cliente al teléfono 1-800-221-6352 o enviando un correo electrónico a windowfashions@springswindowfashions.com. Estaremos muy dispuestos para ayudarlo. Nuevamente, nosotros apreciamos que nos haya escogido para mejorar el diseño y la apariencia de su hogar.

Merci d'avoir acheté ce superbe traitement de fenêtre que nous sommes fiers d'avoir exécuté pour vous. Votre store a été fait sur mesure selon votre propre cahier des charges dans un souci d'excellence et de la plus haute technicité. Nous ne doutons pas qu'il vous offrira des années de beauté et d'entretien facile. Profitez-en bien!

Pour installer votre store, veuillez suivre les instructions détaillées. Si vous avez des questions n'hésitez pas à prendre contact avec notre Centre de service après-vente en téléphonant au 1-800-221-6352 ou par courrier électronique windowfashions@springswindowfashions.com. Nous vous aiderons avec plaisir. Encore une fois, nous vous remercions de nous avoir choisi pour améliorer et embellir votre intérieur.




HOW TO INSTALL CÓMO INSTALAR COMMENT INSTALLER

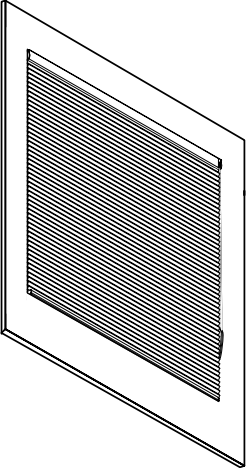
Inside-/ceiling- or outside-mount cellular, pleated or Roman continuous-loop shade

La persiana celular, plisada o romana de lazo continuo de montaje exterior o de montaje interior/de techo


Les stores à chaîne en boucle en pose intérieure/au plafond ou extérieur







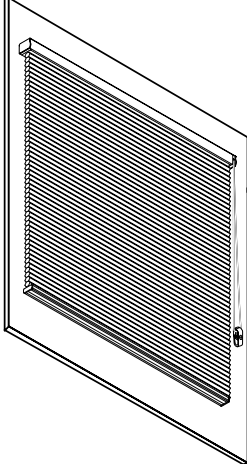Finished looks
Apariencia final
Aspects finis



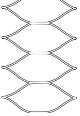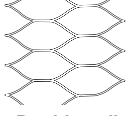Inside/ceiling mount
Montaje de techo/interior
Pose intérieure/au plafond



Outside mount
Montaje exterior
Pose extérieure

 Single cell Celda sencilla Cellulaire simple
 Double cell Celda doble Cellulaire double
 Pleated Plisada Plissé
 Roman shade persiana Romana store romain

For Roman shades, remove the plastic shipping tubes from the shade by sliding them out the end of the shade. Be careful not to pull the lift cord clips off the fabric. Do not dispose of the packaging until the shade is installed and operating to your satisfaction.

Para las persianas Romanas, remueva los tubos plásticos de empaque de la persiana deslizándolos por el extremo de la persiana. Tenga cuidado de no jalar y separar de la tela los sujetadores de la cuerda levantadora. No bote los materiales de empaque hasta que la persiana esté instalada y operando a su satisfacción.

Pour les stores romains, retirer les tubes de transport en plastique du store en les faisant glisser à l'extrémité du store. Bien veiller à ne pas arracher les agrafes du cordon de tirage du tissu. Ne pas éliminer l'emballage avant d'avoir installé le store et d'avoir vérifié qu'il fonctionne convenablement.

1


Everything needed to install your shade
Todo lo necesario para instalar su persiana
Tout le nécessaire pour installer votre store

- 1 Shade
- 2 Brackets/screws
- 3 Wall anchor
- 4 Optional extension brackets
- 5 Top down only bottom brackets
- 6 Optional hold-down brackets
- 7 Mounting screw

- 1 Persiana
- 2 Soportes/tornillos
- 3 Cheville d'ancrage
- 4 Rallonges (en option)
- 5 Supports pour store à ouverture vers le bas uniquement
- 6 Supports de retenue (en option)
- 7 Vis de montage

Bracket chart
Tabla de soportes
Tableau des supports

Ordered width Ancho ordenado Largeur commandée	Bracket quantity Cantidad de soportes Quantité de boîtier
Up to 42" • hasta 106,7 cm • jusqu'à 106,7 cm	2
42 1/16" to 72" • 106,8 cm hasta 182,9 cm • 106,8 cm jusqu'à 182,9 cm	3
72 1/16" to 102" • 183 cm hasta 259,1 cm • 183 cm jusqu'à 259,1 cm	4
102 1/16" to 132" • 259,2 cm hasta 335,3 cm • 259,2 cm jusqu'à 335,3 cm	5
132 1/16" to 144" • 335,4 cm hasta 365,9 cm • 335,4 cm jusqu'à 365,9 cm	6

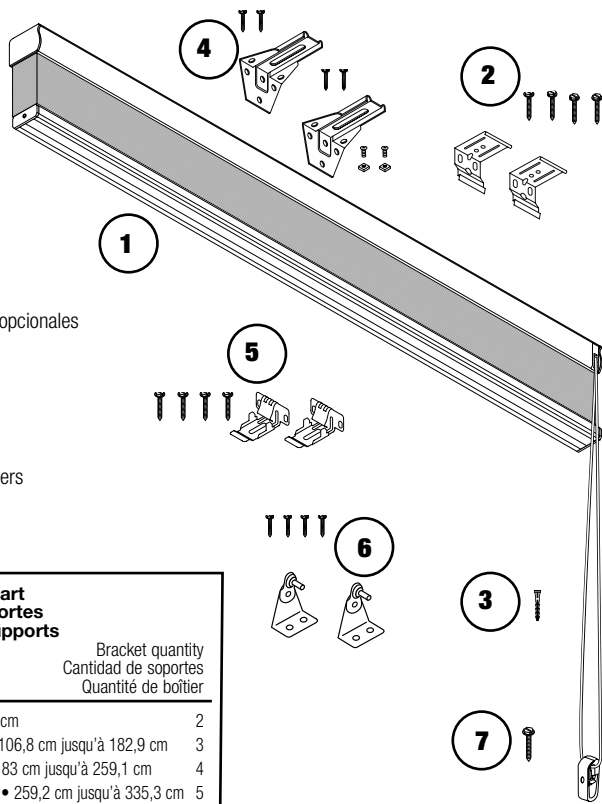

Tools needed • Herramientas necesarias • Outillage nécessaire



1/16" drill bit
 Broca de 1,6mm
 Mèche de 1,6mm

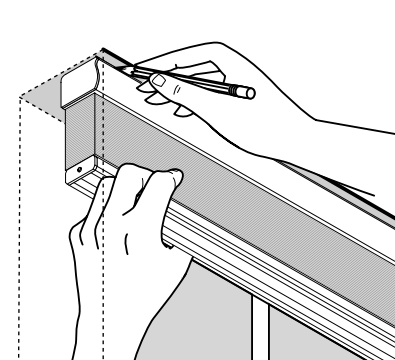
2

Determine inside/ceiling or outside mount
Determine el montaje exterior o interior/de techo
Choisir la pose à l'intérieur/au plafond ou à l'extérieur


3

Place shade in desired location, mark corners
Coloque la persiana en la ubicación deseada, marque las esquinas
Placer le store dans l'emplacement souhaité, marquer les coins

Inside/ceiling mount
Montaje de techo/interior • Pose intérieure/au plafond



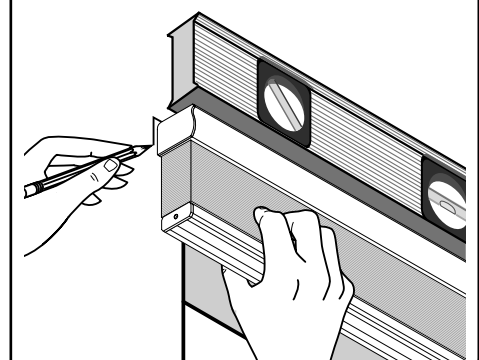
Outside mount
Montaje exterior • Pose extérieure




4

Measure in from shade edge on both ends and mark
 Mida desde el borde de la persiana en ambos extremos y marque
 Mesurer depuis le bord du store à chaque extrémité, et marquer

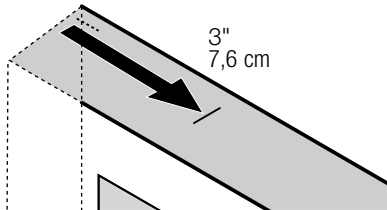Inside/ceiling mount
 Montaje de techo/interior • Pose intérieure/au plafond



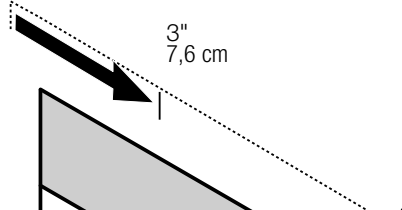
Outside mount
 Montaje exterior • Pose extérieure



5


Mark screw locations; space additional brackets evenly
 Marque las ubicaciones de los tornillos;
 espacie los soportes adicionales a distancias iguales
 Marquer l'emplacement des vis ;
 placer les supports additionnels à intervalle régulier

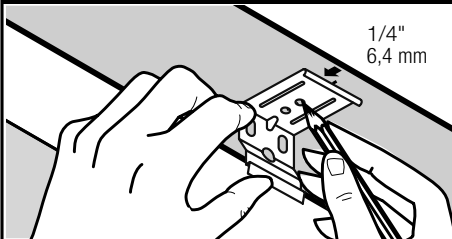Inside/ceiling mount
 Montaje de techo/interior • Pose intérieure/au plafond




1/4" to front of bracket for flush mount headrail
 6,4 mm al frente del soporte para montaje a ras del cabezal
 6,4 mm jusqu'à la partie avant du support pour un montage encastré du boîtier

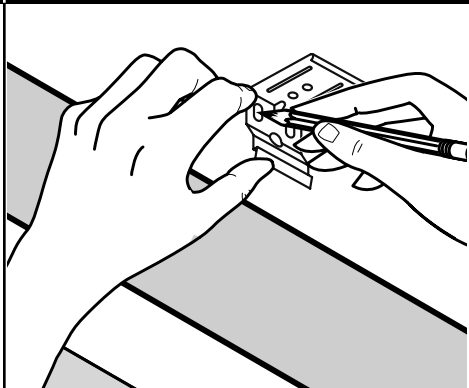Outside mount
 Montaje exterior • Pose extérieure



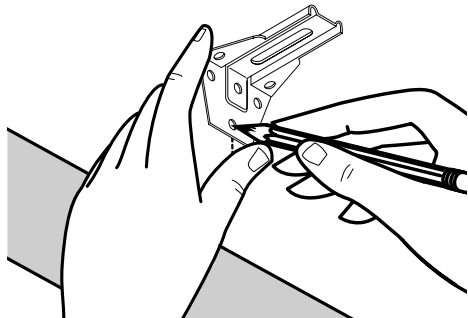
Optional extension bracket (Not available with top down only application)
 Opcional soporte de extensión (No está disponible para aplicaciones del tipo solo arriba-abajo)
 Rallonge en option (non disponible avec les stores à ouverture uniquement vers le bas)




6

Drill holes
 Taladre los agujeros
 Percer les trous

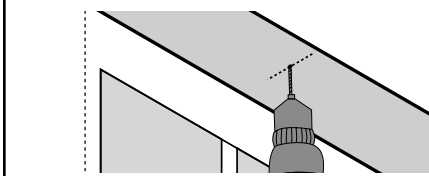
Inside/ceiling mount
 Montaje de techo/interior • Pose intérieure/au plafond



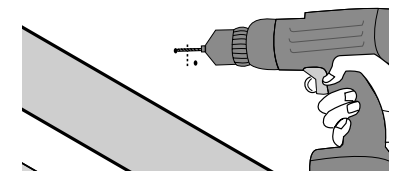Outside mount
 Montaje exterior • Pose extérieure



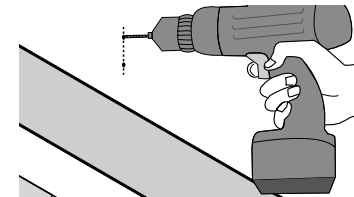
Optional extension bracket
 Soporte de extensión opcional • Rallonge (en option)




7

Screw brackets into place
 Atornille los soportes en su lugar
 Visser les supports

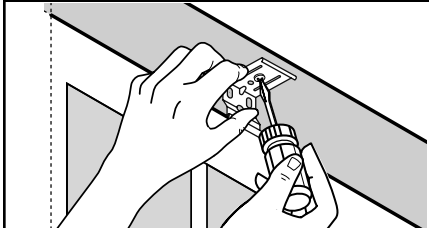
Inside/ceiling mount
 Montaje de techo/interior • Pose intérieure/au plafond



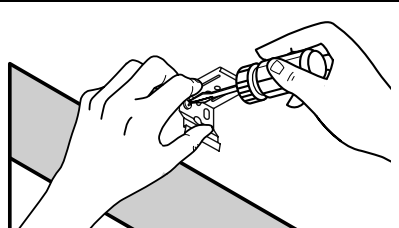Outside mount
 Montaje exterior • Pose extérieure



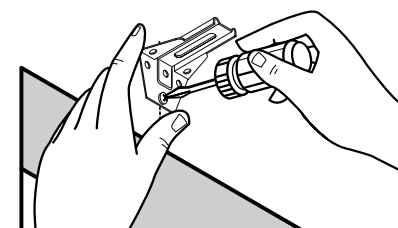Optional extension bracket
 Soporte de extensión opcional • Rallonge (en option)




7

Optional extension brackets: assemble brackets
Soportes de extensión opcionales: ensamble los soportes
Rallonges en option : assembler les supports

Not available with Top Down Only application. Attach headrail brackets to extension brackets using screws and nuts.

No está disponible para aplicaciones del tipo solo Arriba-Abajo. Conecte los soportes del cabezal con los soportes de extensión utilizando tornillos y tuercas.

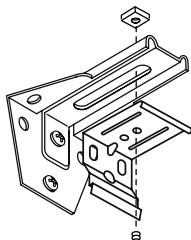Non disponible avec les stores à ouverture uniquement vers le bas. Fixer les supports de boîtier aux rallonges à l'aide des vis et des écrous.



8

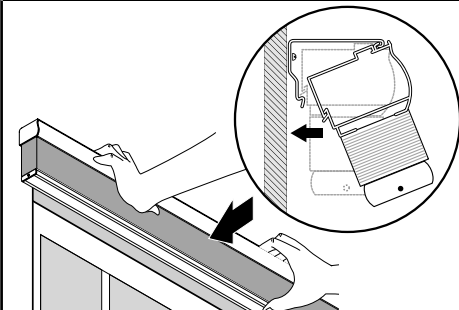
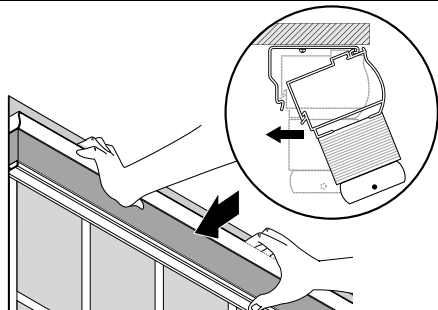
Mount shade into brackets
Monte la persiana en los soportes
Monter le store sur les supports

Inside/ceiling mount

Montaje de techo/interior • Pose intérieure/au plafond


Outside mount

Montaje exterior • Pose extérieure



Optional extension bracket

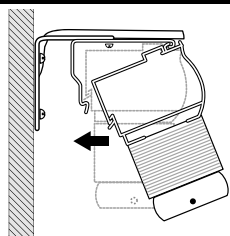Soporte de extensión opcional • Rallonge (en option)



9

Mount cord tensioner; see instructions with bracket
Monte el cordón tensionador; ver las instrucciones
Poser le tendeur de cordon ; voir les instructions avec le support

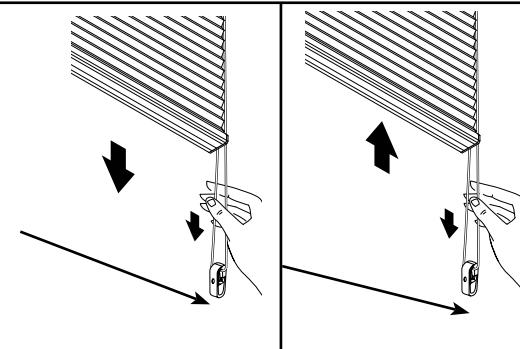


Operating your shade
Operando su persiana
Fonctionnement du store

Note: Cord guide must be mounted to allow operation. Cord loop must be mounted to prevent cord contact with the fabric.

Nota: Debe instalar la guía del cordón para permitir el funcionamiento. Debe instalar el enganche del cordón para evitar el contacto entre el cordón y la tela.

Note: Le guide de cordon doit être installé pour permettre le fonctionnement. La boucle du cordon doit être installée pour empêcher le cordon d'entrer en contact avec le tissu.



Pull one cord to lower the shade, pull the other to raise the shade.

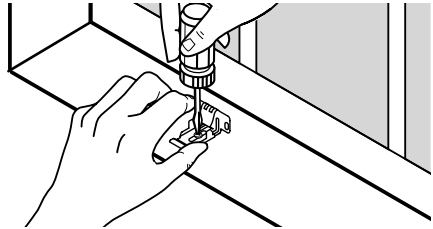
Jale una cuerda para bajar la persiana, jale la otra para subir la persiana.

Tirer sur un cordon pour baisser le store, tirer sur l'autre pour remonter le store.




Top down only: cellular and pleated
Tipo arriba-abajo: celular y plisada solamente
Uniquement pour les stores à ouverture vers le bas :
pour store cellulaire et plissé

Inside/ceiling mount
Montaje de techo/interior • Pose intérieure/au plafond



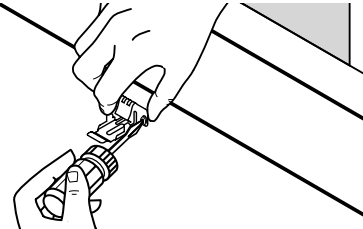Outside mount
Montaje exterior • Pose extérieure




Mount bottomrail brackets to window sill directly below headrail brackets; ensure they are level and in line with each other.

Monte los soportes del riel inferior en el alféizar de la ventana directamente bajo los soportes del cabezal; asegúrese que están a nivel y alineados uno con otro.

Poser les supports de barre inférieure à l'appui de baie directement sous les supports de boîtier ; s'assurer qu'ils soient de niveau et aligner l'un par rapport à l'autre.



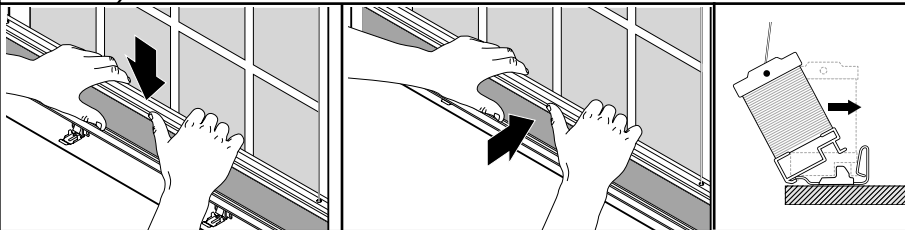Top down only: cellular and pleated
Tipo arriba-abajo: celular y plisada
Uniquement pour les stores à ouverture vers le bas :
pour store cellulaire et plissé



Lower shade and lower stack. Hook the front of bottomrail onto the front of the brackets, rotate the rail back and snap into place. Some downward pressure may be required to reach the bracket.

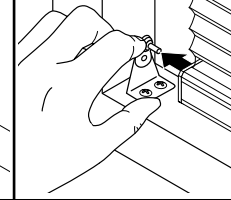
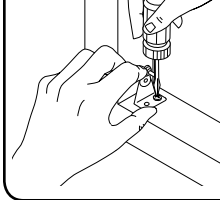
Baje la persiana y baje el bloque de persianas. Enganche el frente del riel inferior en el frente de los soportes, gire el riel hacia atrás y conecte en su lugar. Puede ser necesario realizar una presión hacia abajo para alcanzar el soporte.

Baisser le store et baisser les bandes. Accrocher l'avant de la barre inférieure sur l'avant des supports, faire pivoter la barre vers l'arrière et l'emboîter. Il peut être nécessaire de faire pression vers le bas pour atteindre le support.





Optional hold-down brackets
Soportes de sostenedor-abajo opcional
Supports de retenue en option


Inside/ceiling mount
Montaje de techo/interior • Pose intérieure/au plafond



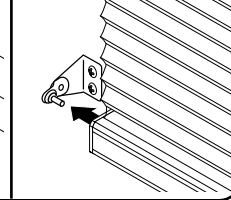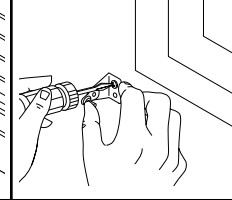Outside mount
Montaje exterior • Pose extérieure



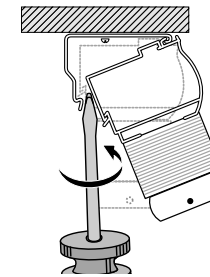Shade removal
Remoción de la persiana
Enlèvement du store



Thank you for choosing Springs Window Fashions. Your shade has been custom-sized based on your specifications with the highest standards of quality and craftsmanship.

Follow the easy step-by-step instructions to install your shade. Should you need additional support, please feel free to call our Customer Service Center at 1-800-221-6352 or email us at windowfashions@springswindowfashions.com. We will be glad to help you.

Gracias por elegir Springs Window Fashions. Su persiana se ha confeccionado a la medida según sus especificaciones y con los estándares más altos de calidad y fabricación.

Siga las sencillas instrucciones detalladas para instalar su persiana. Si necesita asistencia adicional, comuníquese con nuestro Centro de servicio al cliente al 1-800-221-6352 o por correo electrónico a windowfashions@springswindowfashions.com. Será un gusto poder ayudarlo.

Merçi d'avoir choisi Springs Window Fashions. Votre store a été taillé sur mesure selon vos spécifications avec les normes les plus élevées de qualité et de fabrication.

Suivez les directives étape par étape faciles pour installer votre store. Si vous avez besoin d'aide supplémentaire, n'hésitez pas à communiquer avec notre centre de service à la clientèle au 1-800-221-6352 ou envoyez-nous un courriel à windowfashions@springswindowfashions.com. Nous serons heureux de vous aider.



HOW TO INSTALL CÓMO INSTALAR COMMENT INSTALLER

Inside-/ceiling- or outside-mount cordless Roman shade

La persiana de tela Romana sin cordón de montaje exterior o interior/de cielo

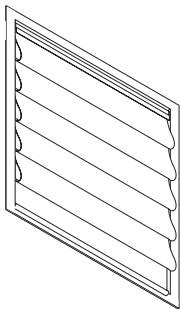
Un store romain sans fil à montage extérieur ou intérieur/au plafond





**Finished looks
Apariencia final
Aspects finis**

Product design is protected by the following patents;
El diseño del producto está protegido por las siguientes patentes:
La conception du produit est protégée par les brevets suivants :
7,143,802 and/y/et 7,546,866

**Inside/ceiling mount
Montaje de techo/interior
Pose intérieure/au plafond**



 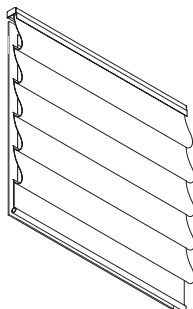**Outside mount
Montaje exterior
Pose extérieure**




1

**Everything needed to install your shade
Todo lo necesario para instalar su persiana
Tout le nécessaire pour installer votre store**

- 1 Shade
- 2 Brackets/screws
- 3 Cordless handle(s)
- 4 Optional hold-down brackets
- 5 Optional extension brackets
- 6 Optional side-mount brackets

- 1 Persiana
- 2 Soportes/tornillos
- 3 Asidera(s) sin cordón
- 4 Soportes sostenedores inferiores opcionales
- 5 Soportes de extensión opcionales
- 6 Soportes de montaje lateral opcionales


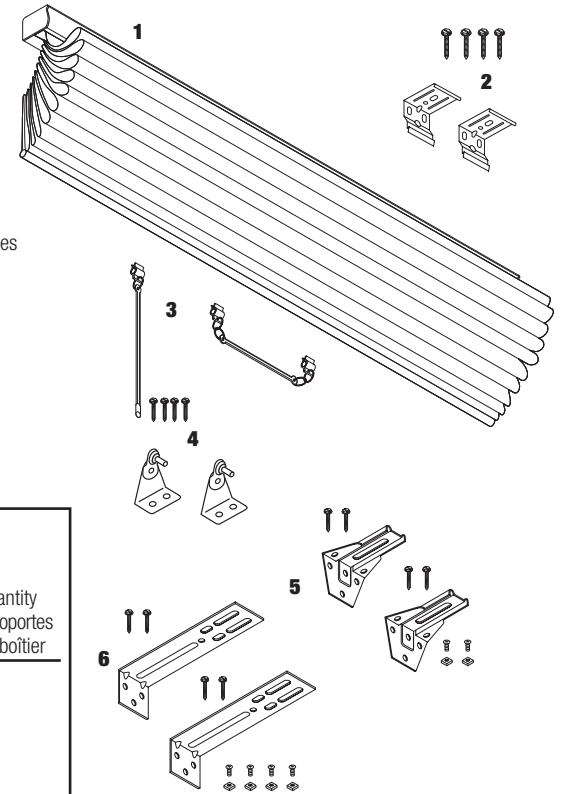
- 1 Store
- 2 Supports/vis
- 3 Poignée(s)
- 4 Supports de retenue (en option)
- 5 Rallonges (en option)
- 6 Supports pour pose latérale (en option)




Bracket chart Tabla de soportes Tableau des supports

Ordered width Ancho ordenado Largeur commandée	Bracket quantity Cantidad de soportes Quantité de boîtier
≤ 42" ≤ 106,7 cm	2
≤ 72" ≤ 182,9 cm	3
≤ 102" ≤ 259,1 cm	4
≤ 132" ≤ 335,3 cm	5
≤ 144" ≤ 365,8 cm	6

 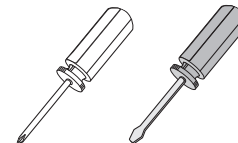Tools needed • Herramientas necesarias • Outillage nécessaire



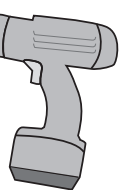1/16" drill bit
Broca de 1,6 mm
Mèche de 1,6 mm



SPRINGS WINDOW FASHIONS
the Best Experience Company

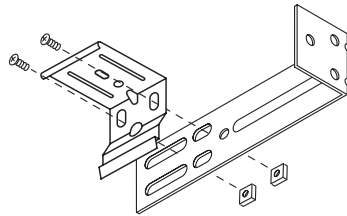
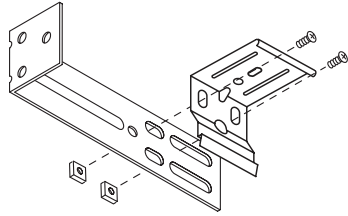
78176-01 (03/13)

2

Determine inside/ceiling, outside or side mount
Determine el montaje de techo/interior, exterior o montaje lateral
Choisir la pose intérieure/au plafond, extérieure ou latérale

2


Optional side mount for shades 60" or less: assemble brackets
Montaje lateral opcional para persianas de 152,4 cm o menores: ensamble los soportes
Pose latérale en option pour stores de 152,4 cm ou moins : assembler les supports




3

Place shade in desired location, mark corners
Coloque la persiana en la ubicación deseada, marque las esquinas
Placer le store dans l'emplacement souhaité, marquer les coins

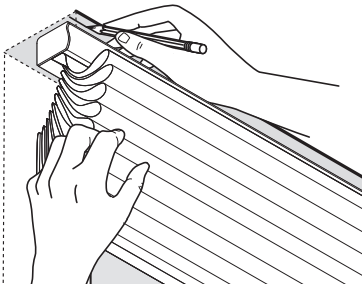
Inside/ceiling mount
Montaje de techo/interior • Pose intérieure/au plafond



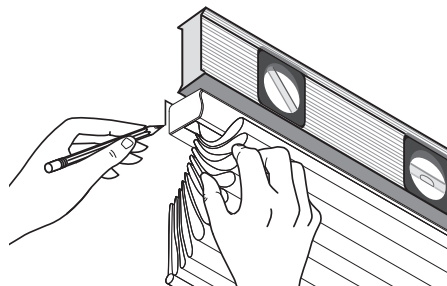Outside mount
Montaje exterior • Pose extérieure



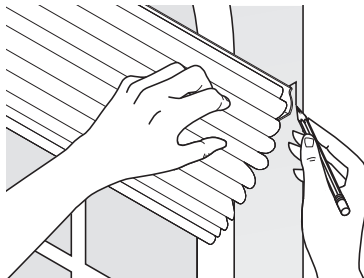
Optional side mount
Montaje lateral opcional • Pose latérale (en option)




4

Measure in from shade edge on both ends and mark
Mida desde el borde de la persiana en ambos extremos y marque
Mesurer depuis le bord du store à chaque extrémité, et marquer

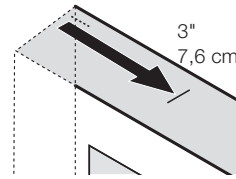Inside/ceiling mount
Montaje de techo/interior • Pose intérieure/au plafond



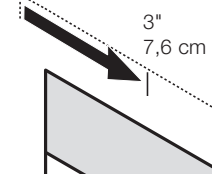
Outside mount
Montaje exterior • Pose extérieure



5


Mark screw locations; center additional brackets, if applicable
Marque la ubicación de los tornillos; centre los soportes adicionales, si es aplicable
Marquer l'emplacement des vis ; centrer les supports supplémentaires, le cas échéant

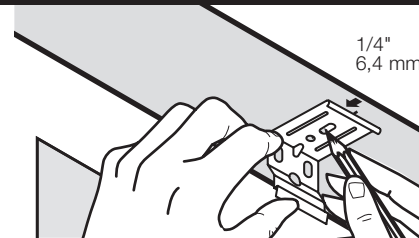Inside/ceiling mount
Montaje de techo/interior • Pose intérieure/au plafond




1/4" to front of bracket for flush mount
 6,4 mm desde el frente del soporte para un montaje a ras
 6,4 mm jusqu'à l'avant du support pour montage encastré

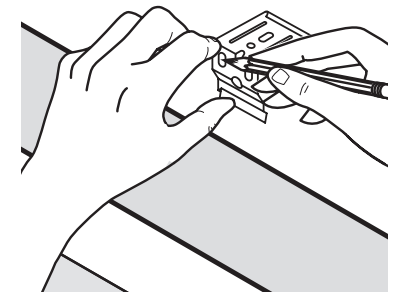Outside mount
Montaje exterior • Pose extérieure




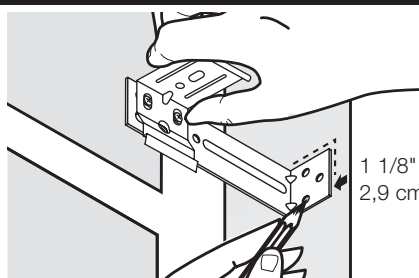Optional side mount
Montaje lateral opcional • Pose latérale (en option)



1 1/8" to front of bracket for flush mount
 2,9 cm desde el frente del soporte para un montaje a ras
 2,9 cm jusqu'à l'avant du support pour montage encastré

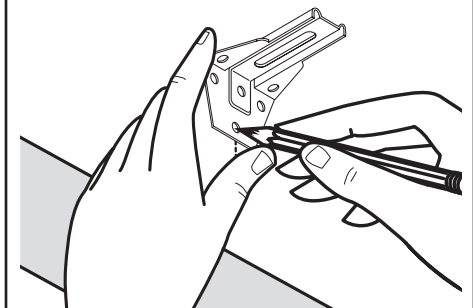
Optional extension bracket
Soporte de extensión opcional • Rallonge (en option)




6

Drill holes
Taladre los agujeros
Percer les trous

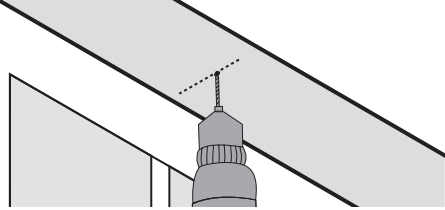
Inside/ceiling mount
Montaje de techo/interior • Pose intérieure/au plafond



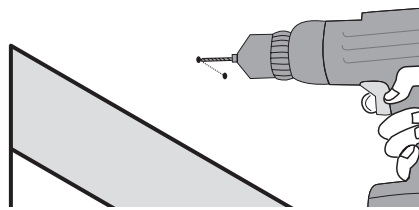
Outside mount
Montaje exterior • Pose extérieure



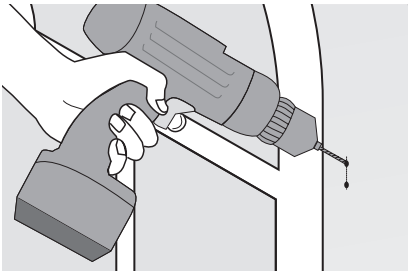Optional side mount
Montaje lateral opcional • Pose latérale (en option)



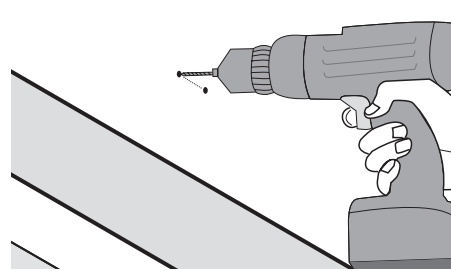
Optional extension bracket
Soporte de extensión opcional • Rallonge (en option)




7

Screw brackets into place
Atornille los soportes en su lugar
Visser les supports

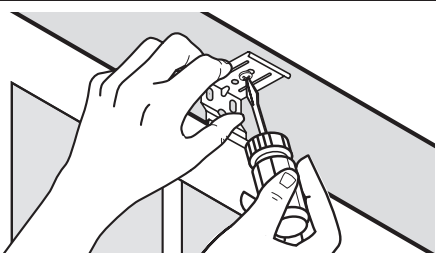
Inside/ceiling mount
Montaje de techo/interior • Pose intérieure/au plafond



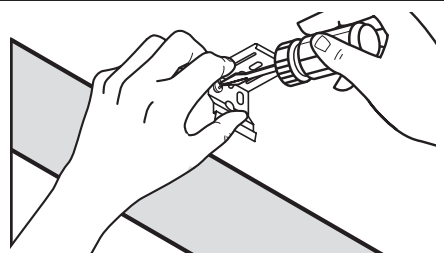
Outside mount
Montaje exterior • Pose extérieure



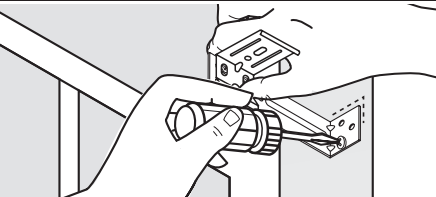Optional side mount
Montaje lateral opcional • Pose latérale (en option)




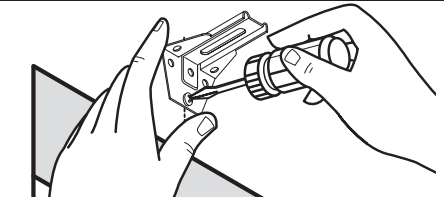Optional extension bracket
Soporte de extensión opcional • Rallonge (en option)



7

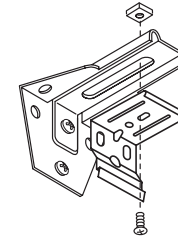Optional extension brackets: assemble brackets
Soportes de extensión opcionales: ensamble los soportes
Rallonges en option : assembler les supports




Attach headrail brackets to extension brackets using screws and nuts.
 Conecte los soportes del cabezal con los soportes de extensión utilizando tornillos y tuercas.
 Fixer les supports de boîtier aux rallonges à l'aide des vis et des écrous.


8

Mount shade into brackets
Monte la persiana en los soportes
Monter le store sur les supports

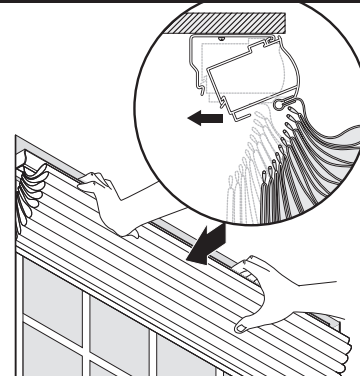
Inside/ceiling mount
Montaje de techo/interior • Pose intérieure/au plafond



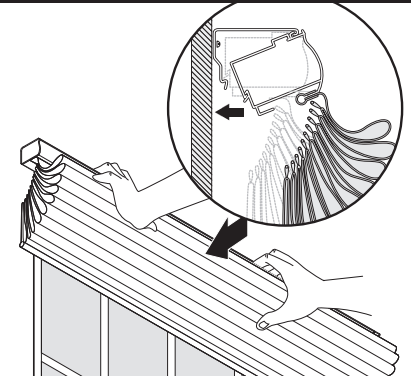
Outside mount
Montaje exterior • Pose extérieure



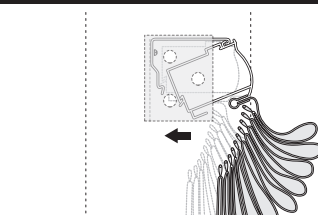Optional side mount
Montaje lateral opcional • Pose latérale (en option)




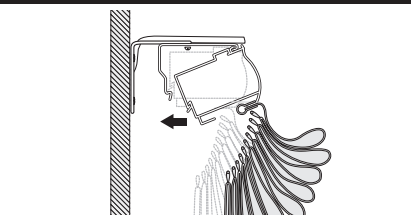Optional extension bracket
Soporte de extensión opcional • Rallonge (en option)



9

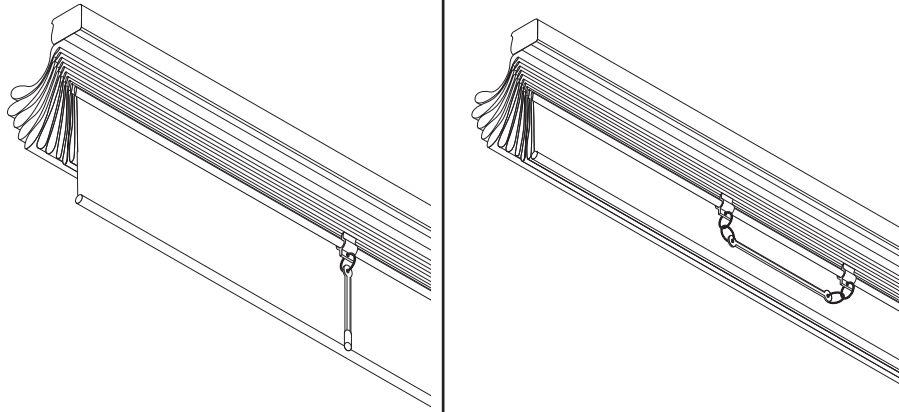Attach cordless handle(s)
Conecte las asideras sin cordón
Fixer la ou les poignée(s)




Handles may already be attached to your blind. They will be located behind the bottom panel. If not mounted, clip a handle onto the first pleat rod above the bottom hem rail. Horizontal handle for short bottom panels and vertical handle for longer bottom panels. For shades over 48" wide, attach two handles shoulder width apart. To lower shade, grasp handle(s) and pull down. To raise shade, grasp handle(s) and push up.

Es posible que la persiana ya venga con asideras incorporadas. Estarán ubicadas debajo del panel inferior. En caso de que no estén instaladas, enganche una asidera en la varilla del primer pliegue que está sobre el riel con dobladillo inferior. La asidera horizontal es para los paneles inferiores cortos y la vertical es para los paneles inferiores más largos. Para las persianas de más de 121,9 cm, fije dos asideras separadas por un hombro de distancia. Para bajar las persianas, sujete la(s) asidera(s) y tire hacia abajo. Para subir las persianas, sujete la(s) asidera(s) y empuje hacia arriba.


Les poignées peuvent être déjà fixées à votre store. Elles seront alors situées derrière le panneau inférieur. Si elles ne sont pas fixées, attachez une poignée sur la première tige de pli au-dessus du rail inférieur. Poignée horizontale pour les panneaux dont la partie inférieure est courte et poignée verticale pour les panneaux dont la partie inférieure est plus longue. Pour les stores de plus de 121,9 cm de largeur, fixez deux poignées à une distance d'épaules l'une de l'autre. Pour abaisser le store, agrippez la(es) poignée(s) et tirez vers le bas. Pour relever le store, agrippez la(es) poignée(s) et poussez vers le haut.



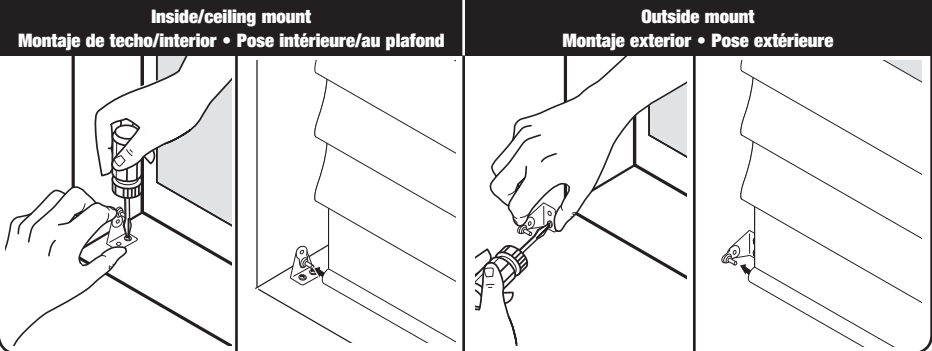Optional: mount hold-down brackets
Opcional: monte los soportes para los sostenedores inferiores
En option : installer les supports de retenue



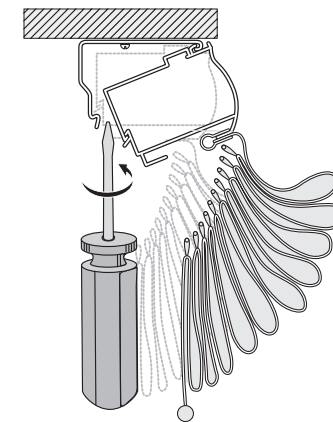Shade removal
Remoción de la persiana
Enlèvement du store



Thank you for purchasing this fine window treatment proudly constructed by us. Your shade has been custom made to your personal specifications with the highest standards of quality and craftsmanship. We have confidence that it will provide you with many years of beauty and easy maintenance. Enjoy!

Follow the easy step-by-step instructions to install your valance. Should you need additional support, please feel free to call our Customer Service Center at 1-800-221-6352 or email us at windowfashions@springswindowfashions.com. We will be glad to help you.

Again, we appreciate that you have chosen us to enhance the design and look of your home.

Gracias por comprar el accesorio de ventanas más fino construido orgullosamente por nosotros. La persiana ha sido fabricada a la medida según sus especificaciones personales con los estándares más altos de calidad y mano de obra. Estamos seguros que le dará muchos años de belleza y fácil mantenimiento. ¡Disfrútela!

Siga las fáciles instrucciones "paso a paso" para instalar la cenefa. Si necesita ayuda adicional, por favor no dude en llamar a nuestro Centro de Servicio al Cliente, teléfono 1-800-221-6352 o envíe un e-mail a: windowfashions@springswindowfashions.com. Con gusto le ayudaremos.

Nuevamente le agradecemos que nos haya escogido para mejorar el diseño y la apariencia de su hogar.

Merci d'avoir acheter ce superbe traitement pour fenêtre que nous sommes fiers d'avoir exécuté pour vous. Votre store a été fabriqué sur mesure pour vous selon les normes de qualité les plus élevées du métier. Nous sommes certains qu'il vous fournira de nombreuses années de beauté avec un entretien facile. Profitez-en!

Suivez les instructions « étape par étape » pour l'installation facile de votre cantonnière. Si vous souhaitez obtenir une assistance supplémentaire, n'hésitez pas à appeler notre service d'aide à la clientèle au 1-800-221-6352 ou envoyez-nous un courriel à windowfashions@springswindowfashions.com. Nous vous aiderons avec plaisir.

Encore une fois, nous vous remercions de nous avoir choisi pour améliorer et embellir votre intérieur.

HOW TO INSTALL CÓMO INSTALAR COMMENT INSTALLER

Roman Shade Valance

Cenefa para persiana Romana

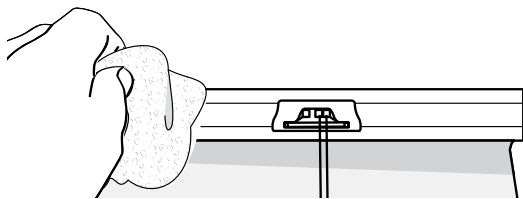
Cantonnière de store romain

1

Clean the front surface of the headrail

Limpie la superficie frontal del cabezal

Nettoyez la surface avant de la tringle porteuse



Lay your shade on a smooth, hard surface. Clean the front surface of the headrail with **isopropyl alcohol** to remove all dust and dirt and let dry completely.

Coloque su persiana en una superficie suave y sólida. Limpie la superficie del frente del cabezal con **alcohol isopropílico** para remover todo el polvo y la tierra y déjela secar completamente.

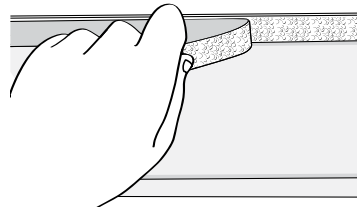
Étendez votre store sur une surface dure et lisse. Nettoyez la face antérieure du boîtier avec de l'**isopropanol** pour enlever toute poussière et salissure, puis laissez sécher complètement.

2

Remove the hook strip

Remueva la cinta adhesiva para gancho

Retirez la bande crochet



Remove the hook strip from the valance.

Remueva la cinta adhesiva para gancho de la cenefa.

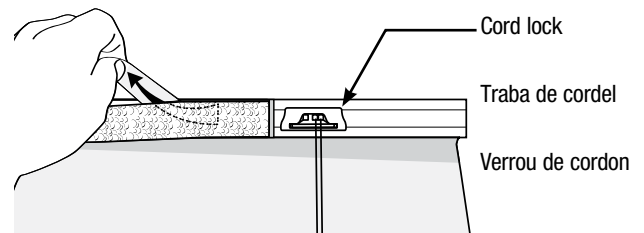
Retirez la bande crochet de la cantonnière.

3

Peel the plastic release strip back

Quite la tira plástico para aflojar del reverso

Pelez le revêtement plastique



Peel the plastic release strip back about 4" from the end of the hook strip. Starting at the cord lock, press the adhesive against the headrail. Continue peeling and pressing the hook strip across the headrail, making sure it is even.

Quite la tira de plástico para aflojar del reverso unas 10.2 cm del extremo de la tira de enganche. Comenzando en la traba del cordel presione el adhesivo contra el riel. Siga quitando y presionando la tira de enganche a lo largo del riel asegurando que quede pareja.

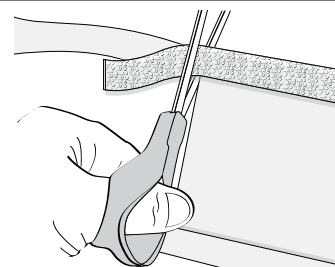
Détachez la bande de décollement en plastique sur 10.2 cm à partir de l'extrémité de la bande crochet. En commençant au bloque-cordon, appuyez l'adhésif sur le boîtier. Continuez à détacher et à appuyer la bande de décollement sur le boîtier en vous assurant qu'elle soit égale.

4

Trim the strip

Corte la tira

Coupez la bande




Trim the strip at the end of the headrail with a scissors.

Corte con tijeras la tira al final del cabezal.

Coupez la partie de la bande qui dépasse au bout de la tringle avec des ciseaux.

5

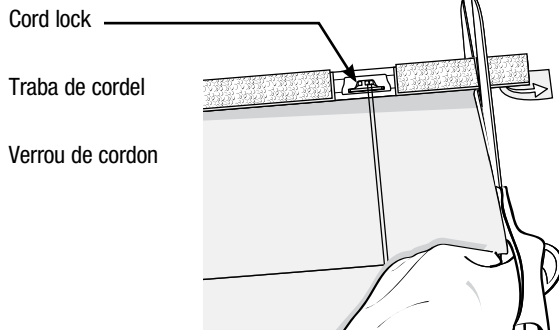Repeat steps 3 and 4
Repita los pasos 3 y 4
Recommencez les étapes 3 et 4



Start on the other side of the cord lock and repeat steps 3 and 4.
Comience al otro lado de la traba del cordel y repita los pasos 3 y 4.
Commencez de l'autre côté du verrou de blocage du cordon et recommencez les étapes 3 et 4.

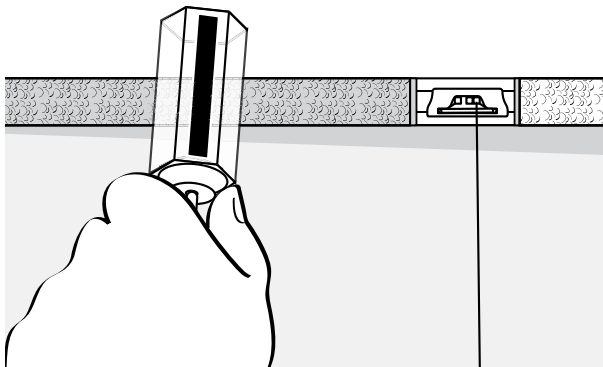
6

Apply pressure
Aplique presión
Appuyez

Note: This is a pressure-sensitive adhesive and requires pressure to provide proper adhesion. Using a roller or hard, round object apply pressure the entire length and width of the hook strip.

Never apply the hook strip over a cord lock.

Install the shade and allow **24 hours** for the adhesive to cure completely before installing the valance.



Nota: Esta tira adhesiva es sensible a la presión y se necesita presión para que quede bien adherida. Use un objeto duro redondo o rodillo para aplicar presión a todo el largo y ancho de la tira de enganche.

Nunca aplique la tira de enganche sobre una traba de cordel.

Instale la persiana y deje durante **24 horas** para que el adhesivo cure completamente antes de instalar la cenefa.

NOTA: Cet adhésif est sensible à la pression et exige qu'on appuie dessus pour obtenir une bonne adhérence. À l'aide d'une règle ou d'un objet contondant, faites pression sur toute la longueur et la largeur de la bande crochet.

Ne jamais appliquer la bande crochet sur le bloque-cordon.

Installez le store et attendez **24 heures** que l'adhésif ait séché complètement avant d'installer la cantonnière.

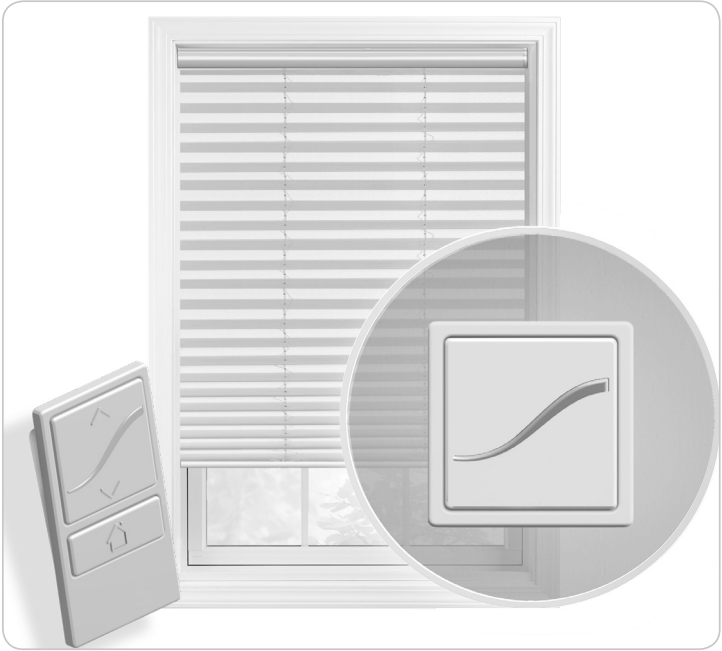
Customers located in the USA and Canada:
Contact our Customer Service Center at 1-800-221-6352
Springs Window Fashions LLC
8467 Route 405 South, P.O. Box 500
Montgomery, PA 17752

Cientes de México: llamar al 01-800-909-0793 para obtener instrucciones sobre el lugar al que deben enviar el producto para su reparación.
Importador en México:
Springs Window Fashions Sales Company de México, S. de R.L. de C.V.
Carretera Federal Reynosa a Matamoros Sin Número Edif 10 A
Prologis Park, Ciudad Reynosa, Tamaulipas CP 88780
TEL: (899) 954-0361

SPRINGS WINDOW FASHIONS
the Best Experience Company

Springs Window Fashions • Middleton, WI 53562-1096

55-1100-01 (10/11)




Owner's Manual

AutoView™ Motorized Shades


Table of Contents

About your Motorized Shade	2
Basic Shade Control	3
Control Features	3
Home Button - Single-Channel Remote	3
LED (Light) Locations and Battery Status	4
Program Buttons	5
Adjusting your Shade's Default Lower Limit (optional)	6
Adjusting your Shade's Default Upper Limit (optional)	6
Adjusting your Shade's Home Position (optional)	7
Adjusting the Home Position on a Group of Shades (optional)	8
Reversing Motor Direction	9
Adding Remotes and Creating Groups	10
Adding a New Remote When the Only Remote Controlling the Shade is Lost	10
Adding a New Remote as a Group Control	11
Adding Secondary Remotes to a Group of Shades for Individual Control Using a Single-Channel Remote as Primary ...	12
Reassigning a Two-Button Remote as a Group Control	13
Adding Secondary Remotes to a Group of Shades for Individual control Using a Two-Button Remote as Primary	14
Network Reset	15
Factory Limits Reset	15
Local Reset	15
Z-Wave Information	16
FCC Class B Notice	16

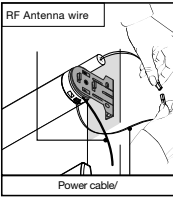Please be sure to read and remove the securing tape and label before operating your motorized shade.



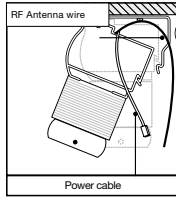**A. Solar, Roller,
Artisan Fabric, Woven Wood**



**B. Cellular, Pleated,
Classic Roman**

Remove securing tape and position motor RF antenna wire and power cable away from roller tube (see A) or outside of headrail (see B) depending upon product type.

Avoid crimping or damaging the antenna and power lead during installation process.

NOTE: RF antenna should be visible (exposed outside headrail) for greatest RF range. In some cases, RF antenna wire may need to be repositioned for optimal performance.

ATTENTION! IMPORTANT INSTALLATION INFORMATION
¡ATENCIÓN! INFORMACIÓN IMPORTANTE SOBRE LA INSTALACIÓN

About Your Motorized Shade

Motorized shades offer a convenient solution to everyday challenges. They provide instant privacy, glare reduction, and eliminate the need to manually adjust shades. Motorized shades also eliminate dangerous cords and create a comfortable and energy efficient environment. Your shades feature Z-Wave Radio technology, Z-Wave is an advanced radio platform which operates up to 65 ft and eliminates the need to aim the remote at the shade.

Basic Shade Control

Upon first power up, you will see a green light illuminate on the headrail or motor end of the shade. This will happen whenever power is first applied or restored after an outage. Press the UP or DOWN button to operate the shade.

Note: you can press and release the opposite directional button to stop the shade while it is in motion.



Press and release the UP button to fully open the motorized shade.




Press and release the DOWN button to fully close the motorized shade.

Momentary Movement: Press and hold the directional buttons (UP or DOWN) to operate shade. Releasing the directional button will stop the movement.

Control Features

Operating your shade with the two-button remote or optional single-channel remote.



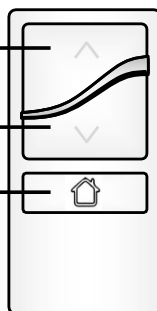
Your controls have been pre-programmed to control your shade. The upper and lower limits and position have already been set. If you are not satisfied with the default upper, lower, or  position of your shade, see steps in the following sections of this manual.



UP Button


DOWN Button



HOME Button
(Intermediate/favorite)




Home Button – Single-Channel Remote



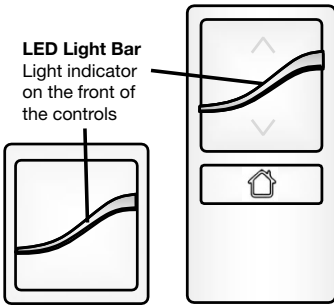
 button: Acts as a STOP button while shade is in motion. It can also be programmed as a quick way to bring shades to your preferred intermediate position.

Press and release  while your shade is at rest will bring your shade to your  position.

Press and release  while the shade is in motion will stop the shade.

Remote LED Indications

If the battery within the remote is completely discharged, there will be no LED feedback when a button is pressed. Always replace battery as a first solution if the LED does not light with a button press.



LED Action	When	Definition
Green flashing only	After button press	Remote battery is good
Amber flash after green flash sequence	After button press	Remote battery is low
Red flash after green flash sequence	After button press	Remote battery require replacement


Replacement battery: #CR2430

Shade LED Indications

The shade LED is located on the end of your shade and provides additional valuable feedback. Avoid excessively bright conditions for better visibility. If there is no operation or LED indication when a command is sent to the shade motor, replace the batteries to resolve.

LED Action	When	Definition
Amber flashing	After motor operation	Shade batteries are at ~ 20%
Red flashing	After motor operation	Shade batteries require replacement

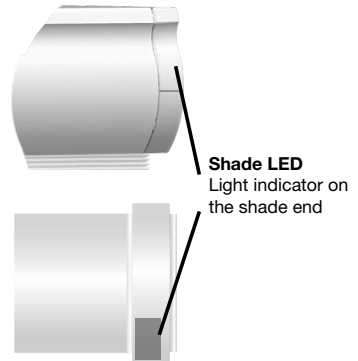
Replacement batteries: 8AA Lithium per battery case; larger shades may require multiple battery cases



Program Buttons


Program Button (remote)

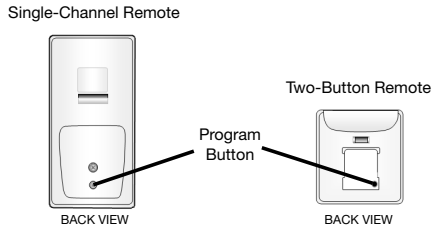The recessed button on the back of the two-button or optional single-channel remote which is used for various programming functions outlined in this guide.



Program/Operation Button (shade)

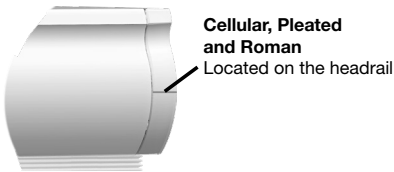
The button located on the headrail or motor end. This button can be used to operate the shade if the remote is misplaced or to confirm various programming functions.




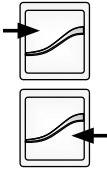
Adjusting Your Shade's Default Lower Limit (optional)


The lower limit of your shade is factory pre-set to a closed position matching the ordered length. You may want to adjust the lower limit to accommodate window hardware or other obstructions.

Note: a jog is a brief up and down movement of the shade.

- 

1. Press and release DOWN button. Allow the shade to reach its default lower limit.
- 

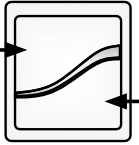2. Once the shade stops, press and hold UP and DOWN buttons simultaneously until LED light on the remote turns amber (about 3 seconds) and release both buttons. The shade will jog and the LED on the remote will flash green. The LED on the shade will alternately flash green and red.
- 

3. Adjust your lower limit by using UP or DOWN to move your shade to your desired lower limit.* The shade will only move while UP or DOWN is being pressed.
- 

4. When the shade is stopped at your new desired lower limit, press and hold UP and DOWN buttons simultaneously until the LED on the remote turns amber (about 3 seconds) then release both buttons. The shade will jog and the new lower limit is set.




***PRODUCT SAFETY NOTE:** Be careful not to exceed the ordered product length, this may result in damaged product. If your shade will not lower to your desired lower limit, contact a customer service agent for assistance.


NOTE: All programming steps are associated with a time-out feature to preserve battery life.

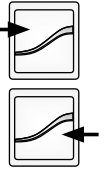
Adjusting Your Shade's Default Upper Limit (optional)


The upper limit of your shade is factory pre-set to an open position which protects the shade from damage while maximizing view. If you desire the shade to have an upper limit at a lower position when fully opened, follow these steps.

Note: a jog is a brief up and down movement of the shade.

- 

1. Press and release UP button. Allow the shade to reach its default upper limit.
- 

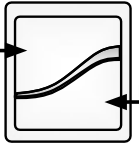2. Once the shade stops, press and hold UP and DOWN buttons simultaneously until LED light on the remote turns amber (about 3 seconds) and release both buttons. The shade will jog and the LED on the remote will flash green. The LED on the shade will alternately flash green and red.
- 

3. Adjust your upper limit by using UP or DOWN to move your shade to your desired upper limit.* The shade will only move while UP or DOWN is being pressed.
- 



4. When the shade is stopped at your new desired upper limit, press and hold UP and DOWN buttons simultaneously until the LED on the remote turns amber (about 3 seconds) then release both buttons. The shade will jog and the new upper limit is set.



 
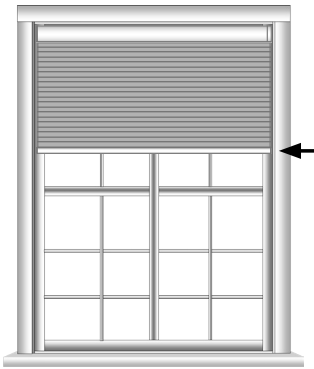
***PRODUCT SAFETY NOTE:** When adjusting the upper limit on cellular or pleated shades, do not raise the product too tight. Adjusting the product too tight can cause the motor to fail and/or break/fray the internal cording. When installing a solar or roller shade in a fascia or cassette valance, be sure the hembar does not lift into the fascia or cassette, as this could cause the hembar to get stuck and/or damage the fabric.



NOTE: All programming steps are associated with a time-out feature to preserve battery life.

Adjusting Your Shade's Home Position (optional)




If your shade system includes an optional single-channel remote, it has been pre-programmed to control your shade(s). The default  position (intermediate position) is pre-set to mid-length of your shade. To change the  position, follow these steps.

Note: if the single-channel remote controls multiple shades as a group, refer to the next section.





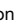1. Use the UP or DOWN button to put the shade in motion. When the shade reaches your desired  position, press and release  to stop the shade.



2. To set your  position, press and hold the  button until the LED on the remote turns amber (about 3 seconds), then release the button. The shade will jog and the new  position is set.



Hold

Note: Always adjust the upper and lower limits before adjusting your  position. After adjusting the upper or lower limits, the  position will reset to the new mid-length position.



A time-out can occur during programming the remote or motor, when no buttons are pressed within a predetermined amount of time. This remote or motor will revert back to a user state. Simply repeat programming steps if the remote or motor has timed-out.

Adjusting the Home Position on a Group of Shades (optional)

If your shade system includes an optional single-channel remote as a group control, it has been pre-programmed to control your shades. The default  position (intermediate position) of all shades is pre-set to mid-length. To change the  position on multiple shades, follow these steps.

 


Fig. 1



Fig. 2

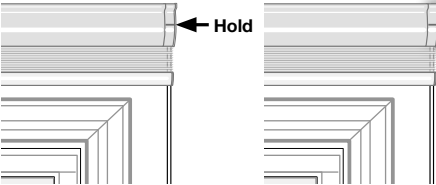


Fig. 3

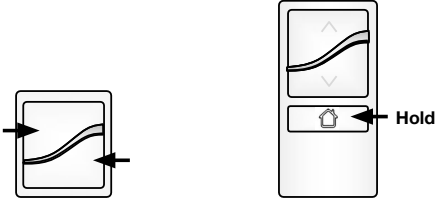


Fig. 4

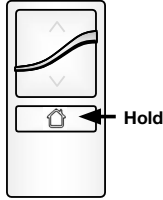
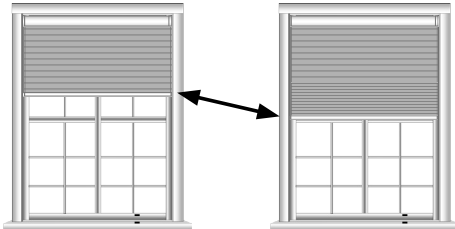








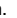


Fig. 5



1. Press and release the  button to bring the group of shades to their pre-programmed  position. (Fig. 1)
2. In order to adjust the  position of each shade, you must first target the individual shade you want to adjust. To do this, press and release the program button on the back of the single-channel remote (one tap). The LED on the remote will alternately flash green. (Fig 2)
3. Then on the shade that you want to adjust, press and hold the program button on the headrail/motor end until the LED begins to flash green (about 3 seconds) and release. The shade will jog. (Fig. 3)
4. Using the two-button remote that controls the shade, adjust the shade to the new desired position. (Fig. 4)
5. Using the single-channel remote, press and HOLD the  button until the LED turns amber (about 3 seconds) and release the button. The shade will jog and the  position of the target shade is now reset. (Fig. 5)
6. Repeat process for additional shades to adjust the new desired  position.

Notes:

- Always adjust the upper and lower limits before adjusting your  position. After adjusting the upper or lower limits, the  position will reset to the new mid-length position.
- You are required to access the motor head to adjust the  position.



A time-out can occur during programming the remote or motor, when no buttons are pressed within a predetermined amount of time. This remote or motor will revert back to a user state. Simply repeat programming steps if the remote or motor has timed-out.

Reversing Motor Direction

Each shade is pre-programmed from the factory to operate up and down corresponding to the appropriate buttons on your remote(s). However, if the directions are inadvertently reversed, follow these steps to return the shade to proper operation.

 
 
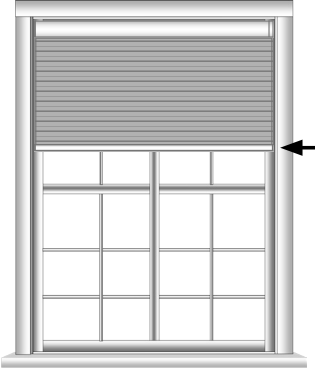


Fig. 1

1. Move the shade to a position between the upper and lower limits. Press and release a directional button to set the shade in motion. Press the opposite directional button to stop the shade. (Fig. 1)

 


Fig. 2

2. Press and hold UP and DOWN buttons until the LED light turns amber (about 3 seconds) then release buttons. (Fig. 2)
The shade will jog and the LEDs on the motor will begin to flash green and red and the LEDs on the remote will flash green.



Fig. 3

3. Press and hold the UP and DOWN buttons until the LED turns amber (about 3 seconds) then release buttons. (Fig. 3)
Shade direction has now been reversed; however, the upper and lower limits have been maintained.



A time-out can occur during programming the remote or motor, when no buttons are pressed within a predetermined amount of time. This remote or motor will revert back to a user state. Simply repeat programming steps if the remote or motor has timed-out.

Adding Remotes and Creating Groups

Your motorized shades are pre-programmed from the factory with the appropriate pairing and grouping between remotes and shade motors. There are several scenarios when additional programming steps will be required. The next sections explain how to accomplish the most common scenarios you will encounter. If the appropriate scenario is not included, please contact a customer service representative prior to attempting any adjustments.

Adding a New Remote When the Only Remote Controlling the Shade is Lost

If you no longer have your remote, or the remote has been damaged and no longer works, follow these steps.

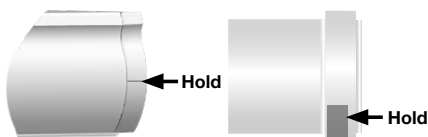


Fig. 1

1. Press and hold the program button on the headrail/motor end, the LED will flash green then amber (about 7 seconds). When the shade jogs once, release the button and the LED will turn solid amber and turn off. The motor is now ready to be associated to a new remote. (Fig. 1)

 


Fig. 2

2. Using a paper clip or a similar item, press and release the programming button located on the back side of the new remote twice in rapid succession (2 taps) The LED on the remote will flash alternately amber and green. (Fig. 2)

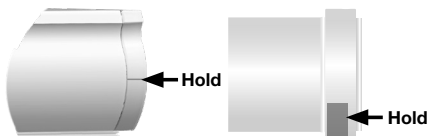


Fig. 3

3. Press and hold the program button on the headrail/motor end, release when LED flashes green (about 3 seconds). (Fig. 3.) The shade will jog and all LED's will turn off. The shade will now operate from the newly added remote.



A time-out can occur during programming the remote or motor, when no buttons are pressed within a predetermined amount of time. This remote or motor will revert back to a user state. Simply repeat programming steps if the remote or motor has timed-out.

Adding a New Single-Channel Remote as a Group Control

If a group control was not selected at the time of purchase and is being added to an existing motorized shade, follow the steps below.

Note: Individual shade control will be restored with the original two-button remote only after it has been reassociated with the shade as a secondary remote. (see next page).

 


Fig. 1

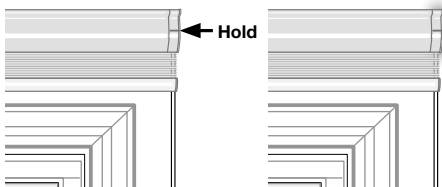


Fig. 2

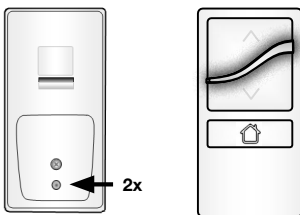


Fig. 3

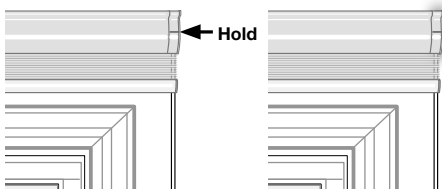


Fig. 4

1. Exclude the two-button remote as the primary control

A. Press and release the program button on the back of the remote three times in rapid succession (3 taps). The LED will flash, alternating amber to identify exclusion mode. (Fig. 1)

B. Press and hold the button on the headrail/motor end until the LED begins to flash green (about three seconds), and release. The LED on the motor will turn solid green, then turn off and the shade will jog, confirming exclusion. (Fig. 2)

2. Include the new group remote as the primary control.

A. Press and release the program button on the back of the remote twice in rapid succession (2 taps). (Fig. 3.) The LED on the new group remote will flash alternating amber and green to identify inclusion mode.

B. Press and hold the program button on the headrail/motor end until the LED flashes green (about 3 seconds), and release. (Fig. 4.) The shade will jog and all LED's will turn off. The shade will now operate from the newly added remote.

Repeat this process for each motor to be added to this group.

Go to page 12 to add secondary remotes to shades in the group for individual control.



A time-out can occur during programming the remote or motor, when no buttons are pressed within a predetermined amount of time. This remote or motor will revert back to a user state. Simply repeat programming steps if the remote or motor has timed-out.

Adding Secondary Remotes to a Group of Shades for Individual Control Using a Single-Channel Remote as Primary

Adding individual control to shades that are part of a newly formed group. This remote will now be referred to as the secondary control.

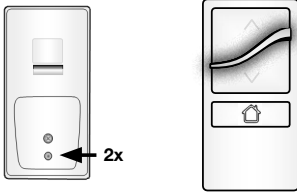


Fig. 1

 


Fig. 2

 


Fig. 3

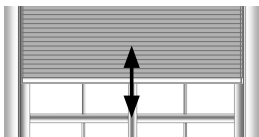
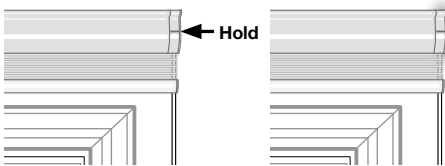


Fig. 4

1. Joining a secondary remote to the primary remote.

- A. Starting with the primary control, press and release the program button on the back side of the current remote twice in rapid succession (2 taps). The LED light will flash alternating amber and green to identify inclusion mode. (Fig. 1)
- B. Press and hold the program button on the secondary remote control until the LED light flashes green (about 3 seconds), then release the button. (Fig. 2.) Both the primary and secondary remote LEDs will flash green, then turn off confirming inclusion.

2. Associate secondary control to the motor.

- A. Press and release the program button on the back side of the secondary control once (1 tap). The LED will flash green. (Fig. 3)
- B. Press and hold the program button on the target shade headrail or motor end until the LED light flashes green (about 3 seconds), then release button. (Fig 4.) The LED on the secondary control will turn green and the shade will jog. Both the primary (group) and secondary (individual) controls will now operate the shade.

Repeat this process on all shades you want to individually control.

Reassigning a Two-Button Remote as a Group Control

This process is followed when the end user desires to reassign a two-button remote to control a group of shades. You must first exclude all individual two-button remotes and include the two-button remote you desire as the primary controller.

NOTE: This two-button remote will no longer perform as an individual motor controller.

 


Fig. 1

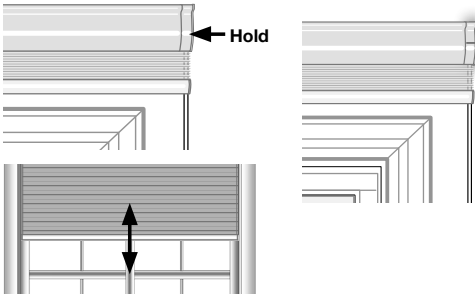


Fig. 2

1. Exclude the two-button remote as the primary control.

A. Press and release the program button on the back of the remote three times in rapid succession (3 taps). The LED will flash, alternating amber to identify exclusion mode. (Fig. 1)

B. Press and hold the button on the headrail/motor end until the LED begins to flash green (about three seconds), and release. The LED on the motor will turn solid green, then turn off and the shade will jog, confirming exclusion. (Fig. 2)

Repeat this process for each motor to be added to this group.

Go to page 14 to add secondary remotes to shades in the group for individual control.

 


Fig. 3

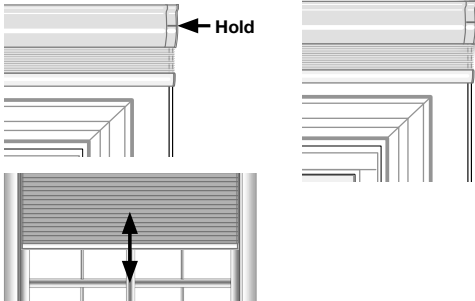


Fig. 4

2. Include two-button remote as the primary controller of a group of shades.

A. Press and release the program button on the back of the remote twice in rapid succession (2 taps). (Fig. 3.) The LED on the new group remote will flash alternately amber and green to identify inclusion mode.

B. Press and hold the program button on the headrail/motor end until the LED flashes green (about 3 seconds), and release. (Fig. 4.) The shade will jog and all LED's will turn off. The shade will now operate from the newly added remote.

Repeat this process for each motor to be added to this group.

Go to page 14 to add secondary remotes to shades in the group for individual control.

Adding Secondary Remotes to a Group of Shades for Individual Control Using a Two-Button Remote as Primary.

Adding individual control to shades that are part of a newly formed group. This remote will now be referred to as the secondary control.

 


Fig. 1

 


Fig. 2

1. Joining a secondary remote to the primary remote.

A. Starting with the primary control, press and release the program button on the back side of the current remote twice in rapid succession (2 taps). The LED light will flash alternating amber and green to identify inclusion mode. (Fig. 1)

B. Press and hold the program button on the secondary remote control until the LED light flash green (about 3 seconds), then release the button. (Fig. 2.) Both the primary and secondary remote LEDs will flash green, then turn off confirming inclusion.

 


Fig. 3

2. Associate secondary control to the motor.

A. Press and release the program button on the back side of the secondary control once. The LED will flash green. (Fig. 3)

B. Press and hold the program button on the target shade headrail or motor end until the LED light flashes green (about 3 seconds), then release button. (Fig. 4.) The LED on the secondary control will turn green and the shade will jog. Both the primary (group) and secondary (individual) controls will now operate the shade.


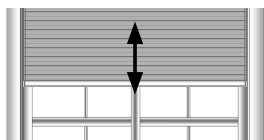
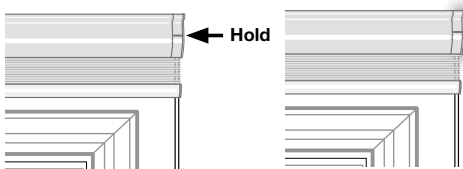


Fig. 4

Repeat this process on all shades you want to individually control.

Use these procedures only if a complete network reset is required.
Contact Customer Service to understand if you need to perform these steps.

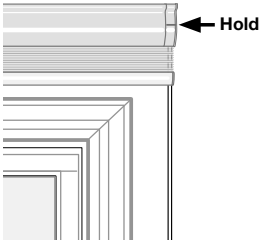
Network Reset



1. Press and hold the button on the headrail endcap until the shade jogs once (about 7 seconds), then release the button. The LED will go from solid green, flashing green, and go to flashing amber.

NOTE: Shade limits are not lost. All controllers will be removed from the motor's memory.

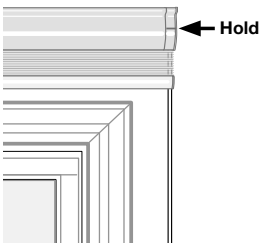
Local Reset - Motor



1. Press and hold the button on the headrail endcap until the shade jogs twice (about 15 seconds), then release the button. The LED will go from solid green, flashing green, to flashing amber then go to rapid flashing red.

NOTE: Factory limits are set in the motor at about 2" to 4" apart. All controllers will be removed from the motor's memory.

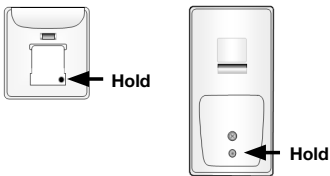Local Reset - Remotes



1. Press and hold the programming button until the LEDs stop flashing. LEDs will flash green, amber, red, and then finally turn off (about 15 seconds).

NOTE: Local reset must be performed on both the controllers and motors. All motors will be removed from the remotes memory



Z-Wave is a wireless mesh-networking protocol for reliable, intelligent home control of all Z-Wave compatible devices. Z-Wave devices can act as repeaters to create a mesh-network to ensure reliable communication regardless of the manufacturer or type of device. This product can be included and operated in any Z-Wave network with other Z-Wave certified devices from any other manufacturer. Z-Wave devices such as lamp modules, fan controllers, thermostats, dimmer switches and many other types of home control devices are available from a wide range of manufacturers. The Z-Wave Alliance (www.z-wavealliance.com) provides a list of manufacturers of Z-Wave compliant devices. Z-Wave was created by Sigma Designs and more details on the technology can be found at www.z-wave.com.

This product can be included and operated in any Z-Wave network with other Z-Wave certified devices from other manufacturers and/or other applications. All non-battery operated nodes within the network will act as repeaters regardless of vendor to increase reliability of the network.

The current product controls may establish 2 Association Groups. Association Group #1 is dedicated Lifeline for secondary controls, primarily used for battery status reports, central scene cc, local reset cc. Association Group #2 is dedicated to slave shades nodes, with a maximum of 12 slave nodes. Normal shade control command will use association group #2.

FCC Class B Notice

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/television technician for help.

Modifications: Any modifications made to this device that are not approved by Oracle may void the authority granted to the user by the FCC to operate this equipment.

Advance technical information can be found at the website mentioned below, or contacting customer service.

Bali is a brand of Springs Window Fashions, the Best Experience Company 

Visit us at: BaliBlinds.com

or contact motorization technical support at motorization.support@springswindowfashions.com

1-866-221-6352


your home, your style

79084-00 (05/16) IMR 16-2679
springswindowfashions.com • Middleton, WI 53562