


Mini-Blind Installation Instructions

Custom Mini-Blinds

Your custom mini-blind package contains brackets and screws for mounting the blind in almost any position on the window. Unwrap each blind and set it against its designated window to determine whether it was made to fit inside the window frame or on the outside of the casing.

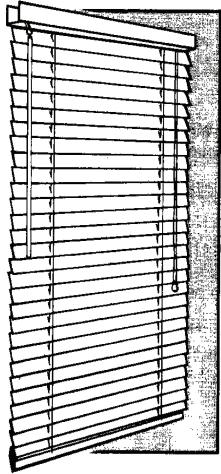

Tools Needed

1. Cordless drill with a 1/4" nut drive attachment
2. Standard or Phillips screwdriver
3. A tape measure
4. A pencil


Note: If you are installing into hollow wall, you'll need to purchase the appropriate hollow wall anchors from your local hardware store.

Parts List

1. Blind
2. Valance
3. Valance clips
4. Installation bracket
5. Installation screws
6. Spacer Blocks (optional...if requested)
7. Hold down (optional...if requested)

Inside Window Frame Installation

If the blind was ordered as an "Inside Mount," to ensure a proper fit, the factory has already made allowances from the window measurements.

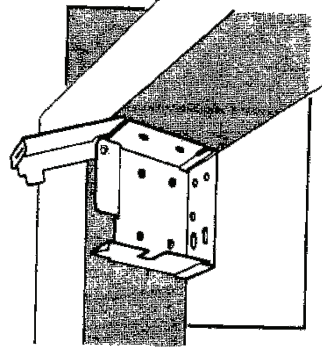


Bracket Installation

The installation brackets are designed with a series of holes to allow for many different mounting conditions. Mount both left and right brackets in the upper inside corners of each window. Set the front of the bracket so that it projects 1/4" into the room (in front of the drywall). This allowance will allow the valance returns to fit snugly against the drywall. The doors of the installation brackets are intended to open from the front and swing upward.

Outside Window Frame (Wall Mount) Installations


If the blind was ordered as an "Outside Mount," the factory has made the item exactly to the ordered size.

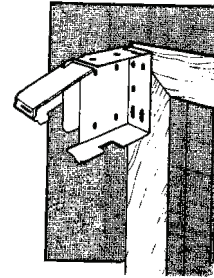

Bracket Installation

The installation brackets are designed to work for wall mounting. Use a minimum of two screws through the back plate of each bracket, one being placed in an upper hole. Make sure this upper screw is firmly imbedded into the wall framing. Mini-blind installation brackets require secure fastening. Brackets also can be mounted onto trim or molding around the windows. If you are installing into a hollow wall, you'll need to purchase the appropriate hollow wall anchors. Seek the advice of an expert at your local hardware store.

Plan to center the outside mount blind on the window, allowing equal extension beyond the window edge on both sides. Brackets should be placed a minimum of 2-1/2" above window opening for mini-blinds.

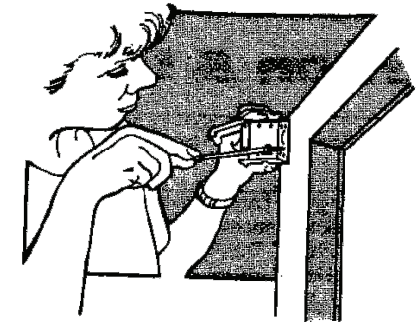


Spacer Blocks

If the blind must be extended from the wall, due to window cranks or other objects of this nature, spacer blocks are provided (if requested) for the installation and center support brackets.

Center Supports


If the blind is over 60 inches wide, center supports have been furnished. Center supports are to be spaced evenly. Install center supports so that they do not interfere with any lift cords or slat ladders. For inside mount, the back plate of the installation brackets should be mounted at the distance out, from the back of the window.

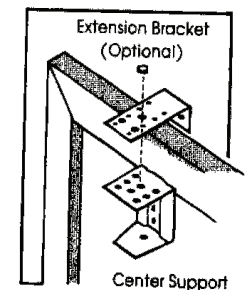

Mini-Blind Installation Instructions

Hanging the Blind


Install the blind by slipping the headrail into the installation brackets (doors being in the up position). Making sure the bracket doors are securely locked when snapped shut.

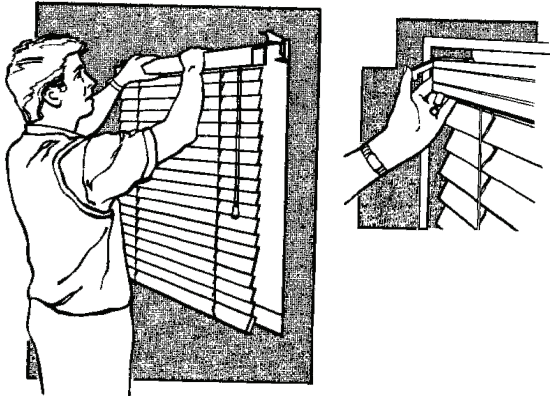

Installation Of Blind


Hold Down Brackets

Hold down brackets are available upon request. These brackets are used to hold the bottomrail of the blind securely in place. Hold down brackets are commonly used on French doors and like conditions.

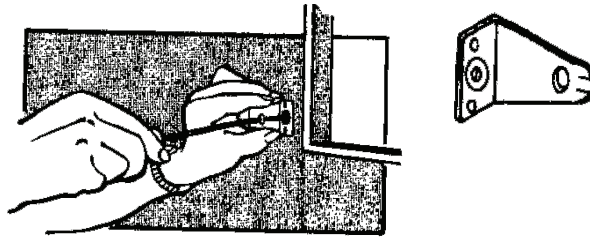

Operation & Care

For protection of furniture and carpeting, slats should be turned up when closed.

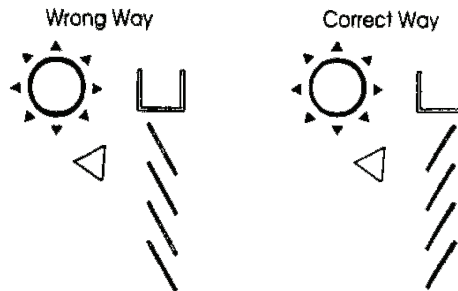

Operation

When raising and lowering the blind, keep the slats tilted open. To operate the locking mechanism, move the cord toward the center of the blind. This will unlock the blind, enabling you to raise and lower the blind. To lock the blind into the position desired, return the cord to the vertical position.


Care and Cleaning

Dust with care.

Safety Warning

Parents should know that children could accidentally strangle in window covering cords. Keep all cording on the front and back of the window covering out of the reach of children.

It is imperative that a safety cord cleat provided be installed.

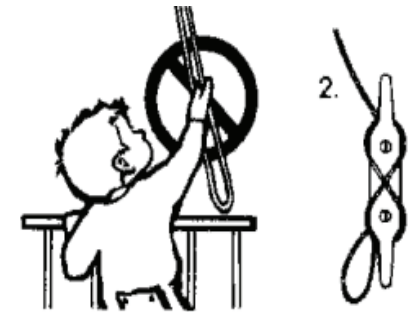

Attaching the Valance

Attach valance clips to the headrail. Position valance clips at each slat ladder. Clip the aluminum valance into the plastic clips that are now attached to the headrail.

